



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2139	7642A 2	BOTTOM COWL ASSEMBLY	1		
2		57786	COVER, PLUG MANUAL	1		
3	10	61802	SCREW (7/8") MANUAL	2		
4		88618	PLUG, BOTTOM COWL MANU	1		
5	10	48409	SCREW MANUAL	1		
6	12	56681	WASHER MANUAL	1		
7	27	62860 1	GASKET	1		3
8		39622	SEAL, RUBBER - EXHAUST PLAT	1		
9		42818A 1	PLATE ASSEMBLY, EXHAUST EX	1		
10	23	27132	BUSHING, FLANG EXHAUST PL	1		
11	12	38453	WASHER, NYLON - WATER OUL	1		
12	26	38452	SEAL, RUBBER - WATER OUT	1		3
13		79799	HOUSING, WATER INLET TUBE	1		
14	27	79797 1	GASKET, HOUSING	1		3
15	10	79798	SCREW, HOUSING TO EXHAUS	2		
16	27	38501 1	GASKET	1	EXHAUST PLATE TO DRIVE SH	3
18		39616	BOOT, CONTROL CABLE - BOTTC	1		
19		39555	COVER PLATE	1		
20	10	69014	SCREW, COVER PLATE TO BOT	3		
21		76176	LEVER, FRONT COVER	1		
22	24	76177	SPRING, FRONT COVER LEVER	1		
23	17	26541	ROLL PIN, LEVER TO BOTTOM C	1		
24		47969	KNOB AND SHAFT, CHOKE	1		
25	12	30314	WASHER, CHOKE SHAFT	1		
26	24	47968	SPRING, COMPRESSION - CHOKI	1		
27		55180	LEVER, CHOKE	1		
28	87	69508A32	STOP SWITCH ASSEMBLY	1	MANUAL PUSH BUTTON SWITC	
29	87	99525A 1	COVER, STOP SWITCH	1	MANUAL PUSH BUTTON SWITC	
30	111	69844	NUT, STOP SWITCH	1	MANUAL PUSH BUTTON SWITC	
31		88238A 4	GROUND STRAP, BOTTOM COW	2		
32	10	69014	SCREW, GROUND STRAP (1/2")	2		
33		76132	BRACKET, SUPPORT - TOP COW	1		
34		60577	MOUNT, RUBBER - REAR SUPPC	2		
35	12	35044	WASHER, RUBBER MOUNT	2		
36	13	26992	LOCKWASHER, RUBBER MOUNT	2		
37	11	36069	NUT, RUBBER MOUNT	2		
38		90435	MOUNT, RUBBER - REAR SUPPO	1		
39	11	20184	NUT, RUBBER MOUNT	2		
40	10	37562	SCREW, REAR SUPPORT BRACK	4		
41	13	26993	LOCKWASHER	4		
42		95967	BRACKET SUPPORT, TOP COW	1		