



| Parts List | | | | | | |
|------------|-------|-----------|----------------------------|-----|---------|----------|
| Ref | Class | Part | Description | Qty | Comment | Footnote |
| 1 | 11 | 22339 | NUT, FLYWHEEL | 1 | | |
| 2 | 12 | 68229 | WASHER, FLYWHEEL NUT | 1 | | |
| 3 | 242 | 7912A14 | FLYWHEEL ASSEMBLY (MANUAL) | 1 | | |
| 3 | 242 | 7912A12 | FLYWHEEL ASSEMBLY (ELECTR) | 1 | | |
| 4 | | 41409A 1 | INERTIA RING ASSEMBLY | 1 | | |
| 5 | 10 | 32417 | SCREW, FLYWHEEL (5/8") | 8 | | |
| 6 | 50 | 65213 | RATHET, FLYWHEEL MANUAL | 1 | | |
| 7 | 10 | 68997 | SCREW, RATCHET TO FLYWHL | 8 | | |
| 8 | 13 | 20202 | LOCKWASHER, RATCHET SCR | 2 | | |
| 9 | | 86617A13 | STATOR (BULLET CONNECTORE | 1 | | |
| 10 | 10 | 77363 | SCREW, STATOR TO UPPER EN | 2 | | |
| 10 | 10 | 76566 | SCREW, STATOR TO UPPER EN | 2 | | |
| 11 | | 86704A 2 | STATOR ASSEMBLY, CHARGING | 1 | | |
| 12 | 10 | 93787 | SCREW, STATOR TO UPPER EN | 3 | | |
| 13 | | 95707 | STATOR SUPPORT | 1 | | |
| 14 | | 92431A 6 | TRIGGER PLATE (BULLET CONN | 1 | | |
| 15 | 339 | 7370A13 | IGNITION COIL ASSEMBLY | 2 | | |
| 16 | 11 | 45076 | NUT, COIL TERMINAL | 4 | | |
| 17 | 84 | 60466A 8 | GROUND WIRE, COIL COVER SC | 2 | | |
| 18 | | 76254 | COVER, IGNITION COIL | 2 | | |
| 19 | 10 | 93460 | SCREW, COVER TO COIL BRACK | 6 | | |
| 20 | 12 | 38833 | WASHER, COIL COVER SCREW | 8 | | |
| 21 | 84 | 813715A 4 | HIGH TENSION LEAD ASSEMBLY | 2 | | |
| 22 | 85 | 63709A 1 | PROTECTOR ASSEMBLY | 2 | | |
| 23 | 33 | 97180 | SPARK PLUG | 2 | | |
| 24 | 339 | 7452A11 | SWITCH BOX (BULLET CONNECT | 1 | | |
| 25 | 10 | 23015 | SCREW | 3 | | |
| 26 | 11 | 45076 | NUT, SWITCH BOX TERMINAL | 6 | | |
| 27 | 86 | 63813 | TERMINAL BLOCK MANUAL | 1 | | |
| 28 | 10 | 62568 | SCREW MANUAL | 2 | | |
| 29 | 10 | 38055 | SCREW MANUAL | 2 | | |
| 30 | 11 | 27164 | NUT MANUAL | 2 | | |
| 31 | | 69355 | STA-STRAP | AR | | |