



STARTER REWIND

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	11	20166	NUT, SHEAVE SHAFT (LEFT HAN	1		8
2	14	61004	TAB WASHER, SHEAVE SHAFT N	1		8
3	25	39597	GROMMET, STARTER HOUSING	2		8
4		76141	CABLE ASSEMBLY, INTERLOCK F	1		
5	10	32228	SCREW (5/8") MANUAL	1		
6	10	69022	SCREW (1/2") MANUAL	1		
7		42820	CAM, INTERLOCK MANUAL	1		
8	10	76138	SCREW (1-1/8") MANUAL	1		8
9	24	76140	SPRING MANUAL	1		8
10		79371	ACTUATOR, INTERLOCK MANUA	1		8
11	10	76137	SCREW (1-5/8") MANUAL	1		8
12	24	76139	SPRING MANUAL	1		8
13	12	30191	WASHER MANUAL	1		
14	18	27769	COTTER PIN MANUAL	1		
15		55860	PULLEY, STARTER	1		8
16	10	45210	SCREW, PULLEY TO STARTER F	1		8
17	12	22887	WASHER, PULLEY SCREW	3		8
18	23	30977	SPACER, PULLEY SCREW	1		8
19		94121	RETINER, STARTER ROPE	1		8
20	11	24656	NUT, PULLEY SCREW	1		8
21		76079	STARTER HOUSING	1		8
22	50	44255A	STARTER SHEAVE	1		8
23		44508	STARTER PAWL	1		8
24	10	88759	SCREW, STARTER HOUSING TO 2	2		
24	10	88760	SCREW, STARTER HOUSING TO 1	1		
25	13	26993	LOCKWASHER, STARTER HOUS	3		
26		61002	PLATE, STARTER REWIND	1		8
27	24	39502A	SPRING, STARTER REWIND	1		8
28	23	87649	BUSHING, SPRING GUIDE	1		8
29	24	87651	SPRING, STARTER PAWL	1		
30	53	87706	E-RING, STARTER PAWL	1		8
31	23	63061	SPACER, SHEAVE SHAFT	1		8
33		94962	LEVER	1		8
34	13	20160	WAVE WASHER	1		8
35		87656	SHEAVESHAFT	1		8
36	50	12066A	STARTER ROPE ASSEMBLY 1	1		8
36		47341A	STARTER ROPE (FOR MANUAL S	1		
37		79470A	RETAINER ASSEMBLY, STARTER	1		
38	12	35559	WASHER, STARTER REWIND	1		8