



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2138	6341	TOPCOWL ASSEMBLY (ELECTRI	1		8
1	2138	6340A	TOP COWL ASSEMBLY (MANUAL	2		8
2		58657	GUIDE, STARTER MANUAL	1		
3	53	72168	RING, RETAINING - ROPE GUI	1		
4		62236	SHIELD, REAR - TOP COWL	1		
5	10	48409	SCREW, REAR SHIELD TO TOP	3		
7		55455	HOOK, TOP COWL LATCH - REAF	1		
8	10	22956	SCREW, REAR HOOK TO TOP CC	2		
9	13	26992	LOCKWASHER, REAR HOOK SCF	2		
10		75973	PLATE, HINGE	1		
11	10	32228	SCREW, HINGE PLATE (5/8")	2		
12	13	26996	LOCKWASHER, HINGE PLATE SC	2		
13		94918T	LEVER, COWL LATCH	1		
14		52739T	HINGE, COWL LATCH LEVER	1		
15	17	58998	ROLL PIN, HINGE TO LEVER	1		
16	2137	3878A	WRAP AROUND COWL ASSEMBL	1		8
17		46785A	COWL LATCH ASSEMBLY	2		
18		30413	HOOK, COWL LATCH FASTENII	2		
19	2161	6347A	COWL FRONT COVER ASSEMBL	1		8
20		76450	BLANKET, COWL FRONT COVE	1		