



Parts List					Qty	Comment	Footnote
Ref	Class	Part	Description				
1	11	22339	NUT, FLYWHEEL	1			
2	12	68229	WASHER, FLYWHEEL NUT	1			
3	242	7912A14	FLYWHEEL ASSEMBLY (MANUAL)	1			
3	242	7912A12	FLYWHEEL ASSEMBLY (ELECTR)	1			
4		41409A 1	INERTIA RING ASSEMBLY	1			
5	10	32417	SCREW, FLYWHEEL (5/8")	8			
6	50	65213	RATHET, FLYWHEEL MANUAL	1			
7	10	68997	SCREW, RATCHET TO FLYWHL	8			
8	13	20202	LOCKWASHER, RATCHET SCR	2			
9		86617A13	STATOR (BULLET CONNECTOR)	1			
10	10	77363	SCREW, STATOR TO UPPER EN	2			
10	10	76566	SCREW, STATOR TO UPPER EN	2			
11		86704A 2	STATOR ASSEMBLY, CHARGING	1			
12	10	93787	SCREW, STATOR TO UPPER EN	3			
13		95707	STATOR SUPPORT	1			
14		92431A 6	TRIGGER PLATE (BULLET CONN)	1			
15	339	7370A13	IGNITION COIL ASSEMBLY	2			
16	11	45076	NUT, COIL TERMINAL	4			
17	84	60466A 8	GROUND WIRE, COIL COVER SC	2			
18		76254	COVER, IGNITION COIL	2			
19	10	93460	SCREW, COVER TO COIL BRACK	6			
20	12	38833	WASHER, COIL COVER SCREW	8			
21	84	813715A 4	HIGH TENSION LEAD ASSEMBLY	2			
22	85	63709A 1	PROTECTOR ASSEMBLY	2			
23	33	97180	SPARK PLUG	2			
24	339	7452A11	SWITCH BOX (BULLET CONNECT)	1			
25	10	23015	SCREW	3			
26	11	45076	NUT, SWITCH BOX TERMINAL	6			
27	86	63813	TERMINAL BLOCK MANUAL	1			
28	10	62568	SCREW MANUAL	2			
29	10	38055	SCREW MANUAL	2			
30	11	27164	NUT MANUAL	2			
31		69355	STA-STRAP	AR			