



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1427	1810A 1	CLAMP BRACKET ASSEMBLY	2,2		
2		22477A 1	THUMB SCREW ASSEMBLY	2,2		
3	12	26227	WASHER, THUMB SCREW	2,2		
4		30664	TUBE, TILT - CLAMP BRACKET T	1,1		
5	15	30497A 1	SHIM, CLAMP BRACKET TO SWI	2,2		
6	11	30499	NUT, TILT TUBE	2,2		
7		30498	CAP, PLASTIC - TILT TUBE	2,2		
8	17	33985A 1	SWIVEL PIN AND TOP YOKE ASS	1,1		
9		30711	BUMPER, TOP YOKE	1,1		
10	10	33986	SCREW, UPPER MOUNT TO SWI	2,2		
11		33840	BRACKET, STEERING ARM - SWI	1,1		
12		34255	BUMPER, STEERING ARM BRAC	1,1		
13	10	21625	SCREW, STEERING ARM BRAC	3,3		
14		33963	BRACKET, REMOTE STEERING	1,1	ORDER REPLACEMENT SCREW	
15	10	20359	SCREW, REMOTE BRACKET TO	2,2	ORDER REPLACEMENT SCREW	
15	10	26632	SCREW, REMOTE BRACKET TO	.2	ORDER REPLACEMENT SCREW	
16		33969	PLATE, FRICTION - CO-PILOT (SV	1,1		
17	10	34439	SCREW, FRICTION PLATE TO SV	2,2		
18	38	31061	SERIAL PLATE	1,1		
19	10	25612	SCREW, DRIVE - SERIAL PLATE	4,4		
20	1455	2211A 3	SWIVEL BRACKET ASSEMBLY	1,1		
21	26	32911	OIL SEAL, SWIVEL BRACKET	2,2		
22	22	23612	FITTING, GREASE - SWIVEL BF	1,1		
23		29359	LUBRICAP, SWIVEL BRACKET Gf	1,1		
24		30462	YOKE, BOTTOM	1,		
24		35402	YOKE, BOTTOM	.1		
25	12	25176	WASHER, SWIVEL PIN TO BOTT	1,1		
25	12	26837	WASHER, SWIVEL PIN TO BOTT	AR,AR		
26	11	28202	NUT, RETAINING - SWIVEL PIN	1,1		
27		20215	LEVER, TILT STOP - STARBOARD	1,1		
28		26864	LEVER, TILT STOP - PORT SIDE	1,1		
29	10	20217	SCREW, ANCHOR - TILT STOP LI	2,2		
30	23	20216	SPACER, TILT STOP LEVER	2,2		
31	10	29237	SCREW, RETAINING - TILT STOF	2,2		
32	15	20473	SHIM, RETAINING SCREW - POR	(-),1,(-),1		
33	13	20846	WASHER, WAVE - RETAINING SI	(2),1,(2)		
34	11	24652	NUT, ANCHOR AND RETAINING	4,4		
35	10	26483	BOLT, CLAMP BRACKET TO BOA	2,2		
36	12	26485	WASHER, CLAMP BRACKET BOL	2,2		
37	11	26484	NUT, CLAMP BRACKET BOLT	2,2		
38		26902A 2	REVERSE LOCK ASSEMBLY	1,1		