



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
-	398	2221A 1	STATOR PLATE ASSEMBLY, COM	1,1		
1	398	2221	STATOR PLATE AND CORE	1,1		
2	398	2201	COIL ASSEMBLY	2,2		
3	54	31059	CLIP, CORE AND COIL	2,2		
4	398	2207	FELT, CAM - BREAKER	1,1		
5	398	732	CLIP, GROUND WIRE LEAD	2,2		
6	10	21130	SCREW, GROUND TERMINAL	2,2		
7	398	2203	CONDENSER ASSEMBLY	2,2		
8	10	22649	SCREW, CONDENSER FASTEN	1,1		
9	10	33990	SCREW, CONDENSER FASTEN	1,1		
10	13	21134	LOCKWASHER, CONDENSER F	2,2		
11	12	21135	WASHER, CONDENSER FASTE	2,2		
12	54	33992	CLAMP, LEAD WIRE	1,1		
13	12	21135	WASHER, LEAD WIRE CLAMP SC	1,1		
14	13	21134	LOCKWASHER, LEAD WIRE CL	1,1		
15	11	21923	NUT, LEAD WIRE CLAMP SCRE	1,1		
16	398	2202	BREAKER ASSEMBLY	2,2		
17	10	33988	SCREW AND LOCKWASHER, B	2,2		
18	12	21135	WASHER, TERMINAL SCREW	2,2		
19	13	21134	LOCKWASHER, TERMINAL SCF	2,2		
20	11	21923	NUT, TERMINAL SCREW	2,2		
21	398	2206	GROUND LEAD, STATOR TO T	1,1		
22	23	30419	SLEEVE, INSULATION - GROUND	1,1		
23	398	2205	LEAD WIRE	1,1		
24	398	2204	LEAD WIRE, TOP	1,1		
25		20119	PROTECTOR, SPARK PLUG	2,2		
26		20623	MARKER, "TOP" - LEAD WIRE	1,1		
27	33	20127	SPARK PLUG (CHAMPION - J6J)	2,2		
28	398	2208	COVER, DUST - STATOR PLATE	1,1		
29	10	21130	SCREW, DUST COVER TO STATI	2,2		
30	54	24836	CLIP, GROUND LEAD	1,1		
31	10	30009	SCREW, GROUND LEAD CLIP TC	1,1		
32		22789	"D" WASHER, CLIP FASTENING	1,1		