



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
-	398	2574A 3	STATOR PLATE ASSEMBLY, COM	1		
1	398	2221	STATOR PLATE AND CORE	1		
2	398	2568A 1	COIL ASSEMBLY	2		
3	398	2321	CLIP, COIL RETAINING	1		
4	398	2413	CLIP, COIL RETAINING	1		
5	398	2207	FELT, CAM - BREAKER	1		
6	398	732	CLIP, GROUND WIRE LEAD	2		
7	10	21130	SCREW, GROUND TERMINAL	2		
8	398	2203	CONDENSER ASSEMBLY	2		
9	10	38395	SCREW, CONDENSER FASTEN	1		
10	10	33990	SCREW, CONDENSER FASTEN	1		
11	13	21134	LOCKWASHER, CONDENSER F	2		
12	12	21135	WASHER, CONDENSER FASTE	2		
13	54	39844A 1	CLAMB, LEAD WIRE	1		
14	12	21135	WASHER, LEAD WIRE CLAMP :	1		
15	13	21134	LOCKWASHER, LEAD WIRE CL	1		
16	11	21923	NUT, LEAD WIRE CLAMP SCRE	1		
17	11	21825	NUT, COIL LEAD WIRE CLIP SC	1		
18	54	24836	CLIP, NYLON - COIL LEAD WIR	1		
19		22789	"D" WASHER, COIL LEAD WIR	1		
20	13	26995	LOCKWASHER, COIL LEAD WIF	1		
21	11	26419	NUT, COIL LEAD WIRE CLIP SC	1		
22	398	2202	BREAKER ASSEMBLY	2		
23	10	33988	SCREW AND LOCKWASHER, B	2		
24	12	21135	WASHER, TERMINAL SCREW	2		
25	13	21134	LOCKWASHER, TERMINAL SCF	2		
26	11	21923	NUT, TERMINAL SCREW	2		
27	398	2206	GROUND LEAD, STATOR TO T	1		
28	23	30419	SLEEVE, INSULATION - GROUN	1		
29	398	2205	LEAD WIRE	1		
30	398	2204	LEAD WIRE - TOP	1		
31		20119	PROTECTOR, SPARK PLUG	2		
32		20623	MARKER, "TOP" - LEAD WIRE	1		
33	33	20127	SPARK PLUG, (CHAMPION J6J)	2		
34	398	2208	COVER, DUST - STATOR PLATE	1		
35	10	36455	SCREW, DUST COVER TO STATI	2		