



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2101	2173A 2	BOTTOM COWL ASSEMBLY	1,1		
2		29206	COVER, PLUG - BOTTOM COWL	1,1		
3	10	34090	SCREW, PLUG COVER TO BOTTOM	4,4		
4	11	28656	NUT, PLUG COVER TO BOTTOM	4,4		
5	27	33947	GASKET, POWERHEAD TO BOTTOM	1,1		
6		33896	MOULDING, TRIM - BOTTOM COWL	1,1		
7	10	29226	SCREW, DECORATIVE - MOUNTING	1,1		
8	13	26995	LOCKWASHER, MOUNTING FASTEN	1,1		
9	11	26419	NUT, MOUNTING FASTENING SC	1,1		
10		33946	BRACKET, LOCK KNOB - COWL F	1,1		
11	10	20653	SCREW, BRACKET TO BOTTOM	2,2		
12	10	22956	SCREW, BRACKET TO BOTTOM	1,1		
13	11	24652	NUT, BRACKET TO BOTTOM COWL	3,3		
--		33474A 1	STOP SWITCH ASSEMBLY	1,1		
14		33474	HARNES, STOP SWITCH	1,1		
15	12	30856	WASHER, SEALING - STOP Sw	1,1		
16		30859	INSULATOR, SLEEVE - INNER	1,1		
17	24	30858A 1	SPRING AND CONTACT ASSEM	1,1		
18		30854	COVER, STOP SWITCH	1,1		
19	13	21972	LOCKWASHER, STOP SWITCH	1,1		
20	11	21971	NUT, STOP SWITCH CONNECT	1,1		
21	54	26550	CLIP, STOP SWITCH LEADS TO E	2,2		
22	10	28192	SCREW, STOP SWITCH LEADS C	2,2		
23		22789	"D" WASHER, STOP SWITCH LE	2,2		