



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	28	30250	KEY, FLYWHEEL	1,1		
2	422	2186	CRANKSHAFT	1,1		
3	533	2034A 2	MAIN BEARING ASSEMBLY, VAL	1,1		
4	17	20032	DOWEL PIN, MAIN BEARING	10,10		
5	10	25313	SCREW, MAIN BEARING CLAMP	2,2		
6	11	29469	NUT, MAIN BEARING CLAMP	2,2		
7	17	20032	DOWEL PIN, MAIN BEARING TO	1,1		
8	34	32203A 1	REED SET, MAIN BEARING (MAT	1,1		
9	34	31240	REED STOP, MAIN BEARING REE	4,4		
10	10	29465	SCREW, REED STOP MOUNTING	4,4		
11	11	29469	NUT, REED STOP MOUNTING SC	4,4		
12	611	1885A 2	CONNECTING ROD ASSEMBLY	2,2		
13	10	20060	SCREW, CONNECTING ROD	4,4		
14	11	20061	NUT, CONNECTING ROD SCREW	4,4		
15	29	30403	BEARING, NEEDLE - CRANKPIN	64,64		
16	29	30401	BEARING, NEEDLE - PISTON PIN	50,50		
17	12	29681	WASHER, NEEDLE BEARING R	4,4		
18	732	2045A 4	PISTON AND PISTON PIN ASSEM	2,2		
19	40	32118	LOCK RING, PISTON PIN	4,4		
20	39	32921	RING, PISTON	4,4		
-	732	2194A 1	PISTON AND PISTON PIN ASSEM	2,2		
-	39	33945	RING, PISTON (.015 OVERSIZE) -	4,4		