



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	1626	2040A 6	GEAR HOUSING ASSEMBLY, CO	1,1	
1	1626	2040A 1	GEAR HOUSING ASSEMBLY	1,1	
2	16	32027	STUD, WATER PUMP BODY /	3,3	
3	16	32017	STUD, GEAR HOUSING TO D	2,2	
4	31	20231	BEARING, ROLLER - DRIVE S	1,1	
5		32008	SHAFT, SHIFT - LOWER	1,1	
6	18	20233	CLIP, RETAINING - SHIFT SHAF	1,1	
7	25	25439	"O" RING, SHIFT SHAFT BUSHI	1,1	
8	23	28374A 1	BUSHING ASSEMBLY, SHIFT SI	1,1	
9	26	31249	OIL SEAL, SHIFT SHAFT BUSI	1,1	
10		25138	CAM, LOWER - REVERSE LOCK	1,1	
11		29823	CAM, UPPER - REVERSE LOCK	1,1	
12	45	31996	/DRIVE SHAFT (STANDARD)	1,1	
13	15	20929A 1	SHIM, DRIVE SHAFT BEARING	AR,AR	
14	30	20861	BEARING, BALL - DRIVE SHAFT	1,1	
15	53	29116	RING, SNAP - BALL BEARING R	1,1	
16	15	20929A 1	SHIM, DRIVE SHAFT BEARING	AR,AR	
17	43	33843	GEAR, PINION - DRIVE SHAFT	1,1	
18	14	29163	TAB WASHER, PINION GEAR F	1,1	
19	10	20925	SCREW, PINION GEAR TO DRIP	1,1	
20	27	32771	GASKET, WATER PUMP BASE TI	1,1	
21	25	26855	"O" RING, WATER PUMP BASE	1,1	
22	46	32766A 1	WATER PUMP BASE ASSEMBL	1,1	
23	26	23300	OIL SEAL, WATER PUMP BAS	1,1	
24	17	29596	DOWEL PIN, WATER PUMP E	2,2	
25	27	32769	GASKET, LOWER - WATER PUI	1,1	
26		32768	PLATE, FACE - WATER PUMP E	1,1	
27	27	32770	GASKET, UPPER - FACE PLATE	1,1	
28	47	20268	IMPELLER, WATER PUMP	1,1	
29	17	23733	PIN, IMPELLER DRIVE	1,1	
30	46	32767A 1	WATER PUMP BODY ASSEMBL	1,1	
31		32001	INSERT, WATER PUMP BOD	1,1	
32	26	32121	OIL SEAL, WATER PUMP BOI	1,1	
33	13	26992	LOCKWASHER, WATER PUMP	3,3	
34	11	29598	NUT, WATER PUMP BODY ANI	3,3	
35	26	25192	SEAL, WATER PUMP BODY TO	1,1	
36	25	20273	RING, RUBBER - CENTRIFUGAI	1,1	
37	25	29619	"O" RING, UPPER - DRIVE SHA	1,1	
38	10	29608	SCREW, GEAR HOUSING FLUS	1,1	
39	27	29586	GASKET, GEAR HOUSING FLU	1,1	
40	26	29612	SEAL, GEAR HOUSING FLUSHI	1,1	