



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		31041	CHOKE SOLENOID, TOP COWL	1,1		
2		30050	DISCONNECT, CHOKE SOLENC	2,2		
3		28016A 1	GROUND STRAP ASSEMBLY	1,1		
4	10	20540	SCREW, CHOKE SOLENOID TO T	2,		
5	13	26992	LOCKWASHER, CHOKE SOLENO	2,		
6	10	24773	SCREW, CHOKE SOLENOID TO T	1,		
7	13	26991	LOCKWASHER, CHOKE SOLENO	1,		
4 & 6	10	35194	SCREW, CHOKE SOLENOID TO T	3,3		
8		27031A 4	PLUNGER ASSEMBLY, CHOKE SI	1,1		
9	12	30164	WASHER, CHOKE SOLENOID LIN	1,1		
10	18	26953	COTTER PIN, CHOKE SOLENOID	1,1		
11	54	22783	"S" CLIP, CHOKE SOLENOID LEA	3,3		
12		31404	SHUTTER, CHOKE - CARBURETC	1,1		
13	23	30438	BUSHING, NYLON - CHOKE SHU	1,1		
14		30212	TERMINAL BLOCK, CYLINDER BL	1,1		
15	10	28192	SCREW, TERMINAL BLOCK TO C	2,2		
16	10	30663	SCREW, WIRING HARNESS LEA	2,2		
17	218	2242A 1	FLYWHEEL ASSEMBLY, COMPLE	1,1		
18	10	35562	SCREW, FLEXIBLE PLATE TO F	8,8		
19	50	33000A 1	RATCHET ASSEMBLY, FLYWHE	1,1		
20	10	32417	SCREW, RATCHET TO FLYW	6,6		
21	10	34290	SCREW, RATCHET TO FLYW	2,2		
22	13	26992	LOCKWASHER, RATCHET TC	2,2		
23	50	30829	STARTER MOTOR ASSEMBLY	1,1		
24	10	22698	SCREW, STARTER MOTOR TO C	2,		
25	13	26993	LOCKWASHER, STARTER MOTO	2,		
24	10	35213	SCREW, STARTER MOTOR TO C	2,2		
26		26511	WIRE, STARTER MOTOR TO STA	1,1		
27	10	29197	SCREW, GROUND WIRE TO STA	1,1		
28	13	26992	LOCKWASHER, GROUND WIRE	1,1		
29		28016A 1	GROUND STRAP ASSY, STARTE	2,2		
30		32445	SOLENOID, STARTER	1,1		
31	10	29238	SCREW, STARTER SOLENOID TI	2,2		
32	13	26996	LOCKWASHER, STARTER SOLE	2,2		
33	11	20645	NUT, STARTER SOLENOID TER	2,2		
34	13	26993	LOCKWASHER, STARTER SOLE	2,2		
35	11	20083	NUT, STARTER SOLENOID TER	1,1		
36	11	26062	NUT, CAP - STARTER SOLENOID	1,1		
37		34229	WIRING HARNESS (INTERNAL)	1,1		
38		26079	PLATE, BACKING - WIRING HAR	1,1		
39	10	26128	SCREW, BACKING PLATE TO RO	4,4		