



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2100	2172A 2	TOP COWL ASSEMBLY	1,1		
2	25	20116	GROMMET, CHOKE KNOB	1,1		
3	16	20353	STUD, FRONT AND REAR - TOI	4,4		
4	12	20028	WASHER, TOP COWL STUD (1/1	4,4		
5	12	20346	WASHER, TOP COWL STUD (3/4	4,4		
6	12	20583	WASHER, TOP COWL STUD (1/3	OPT,OI		
7	11	20361	NUT, TOP COWL FASTENING ST	4,4		
8		20155	RETAINER, STARTER SPRING	1,1		
9	24	29340A 1	SPRING, STARTER REWIND	1,1		
10	23	28912	BUSHING, SPRING GUIDE	1,1		
11	50	30994	SHEAVE ASSEMBLY	1,1		
12		30596	PAWL, STARTER	3,3		
13	13	36206	WASHER, WAVE - STARTER PAW	3,3		
14	23	28919	BUSHING, NYLON - SHEAVE SHA	1,1		
15	23	28911	SPACER, SHEAVE SHAFT	1,1		
16		26179	RETAINER, WAVE WASHER	1,1		
17	12	26180	WASHER, WAVE WASHER RETA	1,1		
18	13	20160	WASHER, WAVE - RETAINER TE	1,1		
19		30595	PLATE, RETAINER - STARTER P	1,1		
20		28913	SHAFT, SHEAVE	1,1		
21		33897A 1	TRIM MOULDING ASSEMBLY, TC	1,1		
22	10	29227	SCREW, BRASS - MOULDING T	1,1		
23	10	29226	SCREW, DECORATIVE - MOULI	2,2		
24	13	26995	LOCKWASHER, MOULDING TO	3,3		
25	11	26419	NUT, MOULDING TO TOP COW	3,3		
21		34735A 1	TRIM MOULDING ASSEMBLY, TC	1,1		
--		34433	BRACKET, TRIM MOULDING TE	1,1		
22	10	23015	SCREW, BRACKET AND MOULI	1,1		
24	12	34434	WASHER, BRACKET AND MOU	1,1		
25	11	20110	NUT, BRACKET AND MOULDIN	1,1		
26	50	28985A 1	STARTER CABLE ASSEMBLY	1,1		
27		28747	HANDLE, STARTER CABLE	1,1		
28		28748	RETAINER, STARTER CABLE AN	1,1		
29		30045	PLATE, ROPE GUIDE	1,1		
30	10	28642	SCREW, DRIVE - ROPE GUIDE PI	3,3		
31	14	20165	TAB WASHER, SHEAVE SHAFT	1,1		
32	11	20166	NUT, SHEAVE SHAFT (LEFT HAN	1,1		
33		33952	SCREEN, VENT - TOP COWL	1,1		
34	10	35193	SCREW, VENT SCREEN TO TOP	4,4		
35		31875	HANDLE, CHROME - TOP COWL	1,1		
36		21002	HANDLE, INSIDE - TOP COWL	1,1		