



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2121	2510A 2	BOTTOM COWL ASSEMBLY	1		
2		29206	COVER, PLUG - BOTTOM COWL	1		
3	10	34090	SCREW, PLUG COVER TO BOT	4		
4	11	28656	NUT, PLUG COVER TO BOTTO	4		
5	27	37976	GASKET, POWERHEAD TO BOT	1		
6		33896	MOULDING, TRIM - BOTTOM COV	1		
7	10	29226	SCREW, DECORATIVE - MOULDI	1		
8	13	26995	LOCKWASHER, MOULDING FAST	1		
9	11	26419	NUT, MOULDING FASTENING SC	1		
10		33946	BRACKET, LOCK KNOB - COWL F	1		
11	10	20653	SCREW, BRACKET TO BOTTOM	2		
12	10	22956	SCREW, BRACKET TO BOTTOM	1		
13	12	27985	WASHER, BRACKET TO BOTTON	1		
14	11	24652	NUT, BRACKET TO BOTTOM COV	3		
15	22	25885	ELBOW, EXHAUST COVER - TELI	1		
16	32	38442	TUBE, TELL TALE _ EXHAUST C	1		
17	22	29111	CONNECTOR, BOTTOM COWL -	1		
--		33474A 1	STOP SWITCH ASSEMBLY	1		
18		33474	HARNESS, STOP SWITCH	1		
19	12	30856	WASHER, SEALING - STOP Sw	1		
20		30859	INSULATOR, SLEEVE - INNER	3		
21	24	30858A 1	SPRING AND CONTRACT ASSE	1		
22		30854	COVER, STOP SWITCH	1		
23	13	21972	LOCKWASHER, STOP SWITCH	1		
24	11	21971	NUT, STOP SWITCH CONNECT	1		
25	54	26550	CLIP, STOP SWITCH LEADS	2		
26	10	31206	SCREW, STOP SWITCH LEADS C	1		
26	10	30663	SCREW, STOP SWITCH LEADS C	1		
27		22789	"D" WASHER, STOP SWITCH LE	2		