



Parts List					Qty	Comment	Footnote
Ref	Class	Part	Description				
-	1626	2470A 6	GEAR HOUSING ASSEMBLY, CO	1			
1	1626	2470A 1	GEAR HOUSING ASSEMBLY(SE	1			
46		36288	CAM, SHIFT	1			
47		20930	FOLLOWER, CAM	1			
48		20843	SLIDE, CROSS PIN	1			
49	24	20254	SPRING, COMPRESSION - CAM	1			
50	15	31154A 1	SHIM, BEARING CUP TO GEAR	AR			
--	43	33844A 1	FORWARD GEAR ASSEMBLY, (1			
51	43	33844	FORWARD GEAR ASSEMBLY	1			
52	31	20249	BEARING, ROLLER - FORWAR	1			
53	31	31215A 1	TAPERED ROLLER BEARING	1			
54	31	31216	CUP, TAPERED ROLLER BE	1			
55	52	32189	RATCHET, SLIDING CLUTCH	1			
56	17	20841	PIN, CROSS - RATCHET TO PR	1			
57	53	20842	RING, RETAINING - CROSS PIN	1			
58	44	32000	SHAFT, PROPELLER	1			
--	43	33844A 2	REVERSE GEAR ASSEMBLY, C	1			
59	43	33844	REVERSE GEAR ASSEMBLY	1			
60	12	32004	WASHER, TRUST - REVERSE	1			
61	30	20839	BEARING, BALL - REVERSE	1			
62	15	20927A 1	SHIM, THRUST WASHER TO G	AR			
63	25	31986	"O" RING, BEARING CARRIER	1			
64		32015A 1	BEARING CARRIER ASSEMBLY	1	SERIAL 00000000-01835753		
65	31	20249	BEARING, ROLLER - BEARIN	1	SERIAL 00000000-01835753		
66	26	23300	OIL SEAL, BEARING CARRIER	1	SERIAL 00000000-01835753		
64		38130A 1	BEARING CARRIER ASSEMBLY	1	SERIAL 01835754-09999999		
65	31	20249	BEARING, ROLLER - BEARIN	1	SERIAL 01835754-09999999		
66	26	23300	OIL SEAL, BEARING CARRIER	1	SERIAL 01835754-09999999		
66	26	23517	OIL SEAL, BEARING CARRIER	1	SERIAL 01835754-09999999		
67	28	30281	KEY, LOCATING - BEARING CA	1			
68	12	31993	WASHER, GEAR HOUSING CO	1			
69		32014	COVER, GEAR HOUSING	1			
70	12	25251	WASHER, BACKING - PROPELLE	1			
71		32002A 1	THRUST HUB AND WASHER AS:	1			
72	12	31992	WASHER, CUPPED - THRUST	1			
73	12	32007	WASHER< SPLINDER - PROPELL	1			
74	11	31990	NUT, PROPELLER	1			
75		31640	TRIM TAB, GEAR HOUSING	1			
76	10	32470	SCREW, TRIM TAB TO GEAR HO	1			
77	11	22178	NUT, DRIVE SHAFT HOUSING TC	1			
78	11	22161	NUT, DRIVE SHAFT HOUSING TC	1			