



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1626	2470A 6	GEAR HOUSING ASSEMBLY, COM	1		
1	1626	2470A 1	GEAR HOUSING ASSEMBLY	1		
2	16	37728	STUD, WATER PUMP BODY /	3		
3	16	32017	STUD, GEAR HOUSING TO D	2		
4	31	20231	BEARING, ROLLER - DRIVE S	1		
5		38071	PLATE, SUPPORT - EXHAUST	1		
6		37721	SEAL, EXHAUST TUBE	1		
7	43	33843	GEAR, PINION - DRIVE SHAFT	1		
8	14	29163	TAB WASHER, PINION GEAR F	1		
9	10	20925	SCREW, PINION GEAR TO DRP	1		
10		32008	SHAFT, SHIFT - LOWER	1		
11	18	20233	CLIP, RETAINING - SHIFT SHAF	1		
12	25	25439	"O" RING, SHIFT SHAFT BUSHI	1		
13	23	28374A 1	BUSHING ASSEMBLY, SHIFT SI	1		
14	26	31249	OIL SEAL, SHIFT SHAFT BUSI	1		
15		25138	CAM, LOWER - REVERSE LOCK	1		
16		29823	CAM, UPPER - REVERSE LOCK	1		
17	45	38466	DRIVE SHAFT (STANDARD)	1		
18	15	20929A 1	SHIM, BALL BEARING TO GEAR	AR		
19	30	20861	BEARING, BALL - DRIVE SHAFT	1		
20	53	29116	RING, SNAP - BALL BEARING R	1		
21	15	20929A 1	SHIM, BALL BEARING TO WATI	AR		
22	27	32771	GASKET, WATER PUMP BASE	1		
23	25	26855	"O" RING, WATER PUMP BASE	1		
24	46	32766A 1	WATER PUMPB BASE ASSEMB	1		
25	26	23300	OIL SEAL, WATER PUMP BAS	1		
26	17	35973	DOWEL PIN, WATER PUMP E	2		
27	27	32769	GASKET, LOWER - WATER PUI	1		
28		32768	PLATE, FACE - WATER PUMP E	1		
29	27	32770	GASKET, UPPER - FACE PLATE	1		
30	47	20268	IMPELLER, WATER PUMP	1		
31	17	23733	PIN, IMPELLER DRIVE	1		
32	46	32767A 1	WATER PUMP BODY ASSEMBL	1		
33		32001	INSERT, WATER PUMP BOD	1		
34	26	32121	OIL SEAL, WATER PUMP BOC	1		
35	13	26992	LOCKWASHER, WATER PUMP	3		
36	11	29598	NUT, WATER PUMP BODY ANC	3		
37	26	38452	SEAL, WATER PUMP BODY TO	1		
38	12	38453	WASHER, NYLON _ WATER PL	1		
39	25	20273	RING, RUBBER _ CENTRIFUGA	1		
40	25	28619	"O" RING, UPPER - DRIVE SHA	1		