



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		31041	CHOKE SOLENOID, TOP COWL	1		
2		30050	DISCONNECT, CHOKE SOLENC	2		
3		28016A	GROUND STRAP ASSEMBLY	1		
4	10	35194	SCREW, CHOKE SOLENOID TO T	3		
5		27031A	PLUNGER ASSEMBLY, CHOKE SI	1		
6	12	30164	WASHER, CHOKE SOLENOID LIN	1		
7	18	26953	COTTER PIN, CHOKE SOLENOID	1		
8	54	22783	"S" CLIP, CHOKE SOLENOID LEA	3		
9	23	30438	BUSHING, NYLON - CHOKE SBHL	1		
10		30212	TERMINAL BLOCK, CYLINDER BL	1		
11	10	28192	SCREW, TERMINAL BLOCK TO C	2		
12	10	30663	SCREW, WIRING HARNESS LEA	1		
13	218	2242A	FLYWHEEL ASSEMBLY, COMPLE	1		
14	10	35562	SCREW, FLEXIBLE PLATE TO F	8		
15	50	33000A	RATCHET ASSEMBLY, FLYWHE	1		
16	10	32417	SCREW, RATCHET TO FLYW	6		
17	10	34290	SCREW, RATCHET TO FLYW	2		
18	13	26992	LOCKWASHER, RATCHET TC	2		
19	50	37345A	STARTER MOTOR ASSEMBLY	1	SERIAL 00000000-01900115	
19	50	38890A	STARTER MOTOR ASSEMBLY	1	SERIAL 01900116-09999999	
20	10	35213	SCREW, STARTER MOTOR TO C	2		
21		26511	WIRE, STARTER MOTOR TO ST	1		
22	10	29197	SCREW, GROUND WIRE TO ST	1		
23	13	26992	LOCKWASHER, GROUND WIRE	1		
24		28016A	GROUND STRAP ASSY, STARTE	2		
25		32445	SOLENOID, STARTER	1		
26	10	31208	SCREW, STARTER SOLENOID TI	2		
27	12	37998	WASHER, STARTER SOLENOID	1		
28	13	26996	LOCKWASHER, STARTER SOLE	2		
29	11	20645	NUT, STARTER SOLENOID TERM	2		
30	13	26993	LOCKWASHER, STARTER SOLE	2		
31	11	20083	NUT, STARTER SOLENOID TERM	1		
32	11	26062	NUT, CAP - STARTER SOLENO	1		
33		34229	WIRING HARNESS (INTERNAL)	1		
34		26079	PLATE, BACKING - WIRING HAR	1		
35	10	26128	SCREW, BACKING PLATE TO BO	4		
36	24	28975	SPRING, GARTER - INTERNAL W	1		
37		34228	SUPPORT, EXTERNAL WIRING F	1		
38	10	35092	SCREW, SUPPORT TO BOT TOM	1		
39	11	24652	NUT, SUPPORT FASTENING SCF	1		
40	54	22740	CLIP, WIRING HARNESS LEADS	1		