



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2125	2660A 2	BOTTOM COWL ASSEMBLY	1,1,,		
1	2125	3282A 2	BOTTOM COWL ASSEMBLY	...1,		
1	2125	3625A 3	BOTTOM COWL ASSEMBLY	...1		
2		29206	COVER, PLUG-BOTTOM COWL	1,1,1,1		
3	10	46270	SCREW, PLUG COVER TO BOT	4,4,4,		
3	10	52904	SCREW, PLUG COVER TO BOT	...4		
4	11	28656	NUT, PLUG COVER SCREW	4,4,4,4		
5	16	21553	STUD, COWL TO REAR SUPPO	4,4,4,4		
6	11	20102	NUT, BOTTOM COWL STUD	4,4,4,4		
7	32	39962	HOSE, TELL TALE-COWL TO EXP	1,1,1,1		
8	22	25885	ELBOW, TELL TALE HOSE TO EX	1,1,1,1		
9	22	29111	CONNECTOR, TELL TALE HOSE	1,1,1,		
10		52889	NOZZLE, TELL TALE HOSE TO B	...1		
11	10	35519	SCREW, NOZZLE TO BOTTOM C	...1		
12	27	37976	GASKET, POWERHEAD TO EXHZ	1,1,1,1		4
13		39622	SEAL, RUBBER-EXHAUST PLATE	1,1,1,1		
14		39449A 1	PLATE ASSEMBLY, EXHAUST EX	1,1,1,1		
15	12	38453	WASHER, NYLON-WATER OUT	1,1,1,1		
16	26	38452	SEAL, RUBBER-WATER OUTLE	1,1,1,1		4
17		38500	RETAINER, WATER OUTLET T	1,1,1,1		
18	10	34439	SCREW, RETAINER TO EXHAU	1,1,1,1		
19	27	38501	GASKET, EXHAUST PLATE TO D	1,1,1,1		4
20	10	22421	SCREW, EXHAUST PLATE TO BC	1,1,1,1		
21	11	46887	NUT, EXHAUST PLATE SCREW	1,1,1,1		
22		37637	BOOT, FUEL CONNECTOR-BOTT	1,1,1,1		
23		39616	BOOT, CONTROL CABLE-BOTTO	1,1,1,1		
24		39630	CUSHION, RUBBER-BOTTOM CO	1,1,1,1		
25		39555A 1	COVER PLATE ASSEMBLY	1,1,1,1		
26		39556	PAD, SOUND-COVER PLATE	1,1,1,1		
27	10	30009	SCREW, COVER PLATE TO BOT	3,3,3,3		
--		33474A 1	STOP SWITCH ASSEMBLY	1,1,1,1		
28		33474	HARNES, STOP SWITCH	1,1,1,1		
29		30859	INSULATOR, SLEEVE-INNER S	1,1,1,1		
30	24	30858A 1	SPRING AND CONTACT ASSEM	1,1,1,1		
31		38950A 1	COVER ASSEMBLY, STOP SWI	1,1,1,1		
32	12	38949	WASHER, SEALING-STOP SW	1,1,1,1		
33	13	21972	LOCKWASHER, STOP SWITCH	1,1,1,1		
34	11	21971	NUT, STOP SWITCH TO BOTTC	1,1,1,1		