



| Parts List | | | | | | |
|------------|-------|----------|------------------------------|---------|---------|----------|
| Ref | Class | Part | Description | Qty | Comment | Footnote |
| 1 | | 37585 | CHOKE SOLENOID | 1,1,1 | | |
| 2 | | 30050 | DISCONNECT, CHOKE SOLENC | 1,1,1 | | |
| 3 | 10 | 26065 | SCREW, CHOKE SOLENOID TO F | 2,2,2 | | |
| 4 | 11 | 46793 | NUT, CHOKE SOLENOID SCREW | 2,2,2 | | |
| 5 | | 27031A 4 | PLUNGER ASSEMBLY, CHOKE SI | 1,1,, | | |
| 5 | | 48315A 6 | PLUNGER ASSEMBLY, CHOKE SI | ,,1, | | |
| 5 | | 52996A 1 | PLUNGER ASSEMBLY, CHOKE SI | ,,1, | | |
| 6 | 12 | 30164 | WASHER, CHOKE SOLENOID LI | 1,1,, | | |
| 7 | 18 | 26953 | COTTER PIN, CHOKE SOLENOID | 1,1,, | | |
| 8 | 54 | 22783 | "S" CLIP, CHOKE SOLENOID LEA | 1,1,1,1 | | |
| 9 | 23 | 30438 | BUSHING, NYLON-CHOKE SHUT | 1,1,, | | |
| 10 | 10 | 30663 | SCREW, WIRING HARNESS LEA | 1,1,1,1 | | |
| 11 | 19 | 35827 | PLUG, BOTTOM COWL | 1,1,1,1 | | |
| 12 | 53 | 30428 | FASTENER, PLUG TO BOTTOM C | 1,1,1,1 | | |
| 13 | | 34228 | SUPPORT, EXTERNAL WIRING F | 1,1,1,1 | | |
| -- | | 52907 | INSULATOR, SUPPORT TO BOT | ,,1, | | |
| 14 | 10 | 31163 | SCREW, SUPPORT TO BOTTOM | 1,1,1,1 | | |
| 15 | 11 | 46887 | NUT, SUPPORT FASTENING SCF | 1,1,1,1 | | |
| 16 | | 34229 | WIRING HARNESS (INTERNAL) | 1,1,1,1 | | |
| 17 | | 26079 | PLATE, BACKING-WIRING HARNI | 1,1,1,1 | | |
| 18 | 10 | 45893 | SCREW, BACKING PLATE TO BO | 4,4,4, | | |
| 18 | 10 | 52903 | SCREW, BACKING PLATE TO BO | ,,4 | | |
| 19 | 24 | 28975 | SPRING, GARTER-INTERNAL WI | 1,1,1,1 | | |
| 20 | | 32445 | SOLENOID, STARTER | 1,1,1,1 | | |
| 21 | 10 | 31208 | SCREW, STARTER SOLENOID TI | 2,2,2,2 | | |
| 22 | 12 | 37998 | WASHER, STARTER SOLENOID | 1,1,1,1 | | |
| 23 | 13 | 26996 | LOCKWASHER, STARTER SOLE | 2,2,2,2 | | |
| 24 | 11 | 20645 | NUT, STARTER SOLENOID TERM | 2,2,2,2 | | |
| 25 | 13 | 26993 | LOCKWASHER, STARTER SOLE | 2,2,2,2 | | |
| 26 | 11 | 20083 | NUT, STARTER SOLENOID TERM | 1,1,1,1 | | |
| 27 | 11 | 26062 | NUT, CAP-STARTER SOLENOID | 1,1,1,1 | | |
| 28 | | 28016A 1 | GROUND STRAP ASS'Y, STARTE | 1,1,1,1 | | |
| 29 | | 45015 | WIRE, STARTER MOTOR TO ST | 1,1,1,1 | | |
| 30 | 11 | 20890 | NUT, GROUND WIRE TO START | 1,1,1,1 | | |
| 31 | 10 | 29197 | SCREW, WIRING HARNESS TO S | 1,1,1,1 | | |
| 32 | 13 | 26992 | LOCKWASHER, GROUND WIRE I | 1,1,1,1 | | |
| 33 | 50 | 38890A 1 | STARTER MOTOR ASSEMBLY | 1,1,1,1 | | |
| 34 | 10 | 35213 | SCREW, STARTER MOTOR TO C | 2,2,2,2 | | |
| 35 | 218 | 2242A 2 | FLYWHEEL ASSEMBLY | 1,1,1,1 | | |
| 36 | 10 | 35562 | SCREW, FLEXIBLE PLATE TO F | 8,8,8,8 | | |
| 37 | 50 | 29828A 1 | RATCHET ASSEMBLY, FLYWHE | 1,1,1,1 | | |