



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1427	1810A 1	CLAMP BRACKET ASSEMBLY	2,2		
1	1427	3263A 1	CLAMP BRACKET ASSEMBLY	,2,2		
2		22477A 1	THUMB SCREW ASSEMBLY	2,2,2		
3	12	26227	WASHER, THUMB SCREW	2,2,2		
4	17	49930A 1	TILT LOCK PIN ASSEMBLY	1,1,1		
5	23	20222	SPACER, CLAMP BRACKET STUD	1,1,1		
5	23	53343	SPACER, CLAMP BRACKET STUD	,,1		
6	16	20221	STUD, CLAMP BRACKET	1,1,1		
	12	24812	WASHER, STUD SPACER TO CLAMP BRACKET	,,1		
7	13	26993	LOCKWASHER, CLAMP BRACKET STUD	2,2,2		
8	11	20083	NUT, CLAMP BRACKET STUD	2,2,2		
8	11	46793	NUT, CLAMP BRACKET STUD	,,2		
9		30664	TUBE, TILT-CLAMP BRACKET TO SWIVEL PIN	1,1,1		
10	15	30497A 1	SHIM, CLAMP BRACKET TO SWIVEL PIN	2,2,2		
10	12	52864	WASHER, CLAMP BRACKET TO SWIVEL PIN	,,6		
11	11	30499	NUT, TILT TUBE	2,2,2		
12		39445A 1	STEERING ARM AND SWIVEL PIN ASSEMBLY	1,1,1		
12		52882A 1	STEERING ARM AND SWIVEL PIN ASSEMBLY	,,1		
12		39445A 2	STEERING ARM AND SWIVEL PIN ASSEMBLY	1,1,1		
12		52882A 2	STEERING ARM AND SWIVEL PIN ASSEMBLY	,,1		
13		30711	BUMPER, STEERING ARM	1,1,1		
14	10	33986	SCREW, UPPER MOUNT TO STEERING ARM	2,2,2		
15		34255	BUMPER, STEERING ARM	1,1,1		
16		39503	BRACKET, REMOTE STEERING	1,1,1		
17	16	39781	STUD, REMOTE STEERING BRACKET	2,2,2		
18	11	20509	NUT, REMOTE STEERING BRACKET	2,2,2		
19	10	31830	SCREW, RIDE-GUIDE KIT TO STEERING ARM	1,1,1		
20	11	20509	NUT, RIDE-GUIDE KIT SCREW	1,1,1		
21		23026	DISC, FRICTION-SWIVEL BRACKET	2,2,2		
22		33969	PLATE, FRICTION-CO-PILOT (SWIVEL PIN)	1,1,1		
23	10	34439	SCREW, FRICTION PLATE TO SWIVEL PIN	2,2,2		
24	12	52865	WASHER, SWIVEL PIN	,,1		
25	38	39784	SERIAL PLATE	1,1,1		
26	10	25612	SCREW, DRIVE-SERIAL PLATE TO SWIVEL PIN	4,4,4		
27	10	26483	BOLT, CLAMP BRACKET TO SWIVEL PIN	2,2,2		
28	12	26485	WASHER, CLAMP BRACKET BOLT	2,2,2		
29	11	26484	NUT, CLAMP BRACKET BOLT	2,2,2		
30		30498	CAP, PLASTIC-TILT TUBE	2,2,2		
30		53078	CAP, PLASTIC-TILT TUBE	,,2		
31		20208	SHAFT, REVERSE LOCK TO SWIVEL PIN	1,1,1		
32	17	25598	ROLL PIN, REVERSE LOCK SPRING	1,1,1		