



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	11	22339	NUT, FLYWHEEL	1,1,1,1		
2	12	36281	WASHER, FLYWHEEL NUT	1,1,1,1		
3	25	37340	"O" RING, FLYWHEEL HUB	1,1,1,1		4
4	28	30250	KEY, FLYWHEEL DRIVE	1...		
4	28	45554	KEY, FLYWHEEL DRIVE	,1,1,1		
5	218	2241A 2	FLYWHEEL ASSEMBLY	1,1,1,1		
6	10	35562	SCREW, FLEXIBLE PLATE TO F	8,8,8,8		
7	50	39838A 1	RATCHET ASSEMBLY, FLYWHE	1,1,1,1		
8	10	32417	SCREW, RATCHET TO FLYW	6,6,6,6		
9	10	34290	SCREW, RATCHET TO FLYW	2,2,2,2		
10	13	26392	LOCKWASHER, RATCHET SC	2,2,2,2		
11	398	2574A 3	STATOR PLATE ASSEMBLY, CO	1,1,1,1		
12		36442A 1	SHIELD ASSEMBLY, STATOR F	1,1,1,1		
13	10	45742	SCREW, SHIELD TO STATOR	2,2,2,2		
14	13	26396	LOCKWASHER, SHIELD SCRE	2,2,2,2		
15		33904	RING, HOLD DOWN-STATOR P	1,1,1,1		
16	10	35400	SCREW, HOLD DOWN RING TC	4,4,4,4		
17	15	33910015	SHIM, STATOR PLATE TO UPPE	1,1,1,1		
18		39280	BRACKET, THROTTLE CAM	1,1,1,1		
19	10	34436	SCREW, THROTTLE CAM BRACK	2,2,2,2		
20		34610	SWIVEL, LINK ROD TO THROTT	1...		
20		46097	SWIVEL, LINK ROD TO THROTT	,1,1,1		
21	13	29720	WASHER, WAVE-LINK ROD SWI	1...		
22		39913	LINK ROD, THROTTLE CAM	1,1,1,1		
23	11	20645	NUT, JAM-LINK ROD	1,1,1,1		
24		39912	LINK, ADJUSTING-LINK ROD TO	1...		
24		46098	LINK, ADJUSTING-LINK ROD TO	,1,1,1		
25	17	39911	PIN, ADJUSTING LINK TO THRO	1,1,1,1		
26	13	34632	WASHER, WAVE-ADJUSTING LIN	1,1,1,1		
27	18	32857	COTTER PIN, ADJUSTING LINK F	1,1,1,1		
28	54	26550	CLAMP, STATOR GROUND LEAD	1,1,1,1		
29	10	30663	SCREW, STATOR GROUND LEA	1,1,1,1		
30		22789	"D" WASHER, STATOR GROUN	1,1,1,1		