



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-		NLA	STATOR PLATE ASSEMBLY.COM	1	SERIAL 00000000-02771621	
1		NLA	STATOR PLATE AND CORE	1	SERIAL 00000000-02771621	
2	398	2568A 1	COIL ASSEMBLY	1	SERIAL 00000000-02771621	
3	398	2321	CLIP(TOP)	1	SERIAL 00000000-02771621	
3		NLA	CLIP(SIDE)	1	SERIAL 00000000-02771621	
4		NLA	CLIP	1	SERIAL 00000000-02771621	
5		NLA	SCREW	1	SERIAL 00000000-02771621	
6	398	2207	FELT	1	SERIAL 00000000-02771621	
7	398	2203	CONDENSER	1	SERIAL 00000000-02771621	
8		NLA	SCREW	1	SERIAL 00000000-02771621	
9		NLA	LOCKWASHER	1	SERIAL 00000000-02771621	
10		NLA	WASHER	1	SERIAL 00000000-02771621	
11	54	24836	CLAMP	1	SERIAL 00000000-02771621	
12		69205	"C" WASHER	1	SERIAL 00000000-02771621	
13		NLA	LOCKWASHER	1	SERIAL 00000000-02771621	
14	11	21923	NUT	1	SERIAL 00000000-02771621	
15	398	2202	BREAKER ASSEMBLY	1	SERIAL 00000000-02771621	
16		NLA	SCREW	1	SERIAL 00000000-02771621	
17		NLA	WASHER	1	SERIAL 00000000-02771621	
18		NLA	LOCKWASHER	1	SERIAL 00000000-02771621	
19	11	21923	NUT	1	SERIAL 00000000-02771621	
20	84	813715A 1	LEAD WIRE	1	SERIAL 00000000-02771621	
21	85	63709A 1	PROTECTOR	1	SERIAL 00000000-02771621	
22		NLA	SPARK PLUG (39)	1	SERIAL 00000000-02098036	
22	33	48368	SPARK PLUG (39)(40)	1	SERIAL 02098037-09999999	
23		NLA	DUST COVER	1	SERIAL 00000000-02771621	
24		NLA	SCREW	2	SERIAL 00000000-02771621	