



GEAR HOUSING (PROPELLER SHAFT)

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
-	1630	7360A29	GEAR HOUSING ASSEMBLY, COI	1		
-	1630	7360A30	GEAR HOUSING ASSEMBLY, COI	1		
1	1630	7360A11	GEAR HOUSING ASSEMBLY - S	1		
36	10	79953	SCREW, GREASE FILLER HOLE	1		
37	12	20260	WASHER, GREASE FILLER HOI	1		
38	10	28653	SCREW, GREASE VENT HOLE	1		
39	12	20262	WASHER, GREASE VENT HOLE	1		
40		71659A 1	SHAFT ASSEMBLY, SHIFT (SHC	1		
40		71658A 1	SHAFT ASSEMBLY, SHIFT (LOK	1		
41	53	22899	RETAINING RING - SHIFT SH	1		
42	23	30676A 1	BUSHING ASSEMBLY, SHIFT SI	1		
43	25	26802	"O" RING, SHIFT SHAFT BU	1		3
44	26	30696	OIL SEAL, SHIFT SHAFT BU	1		
45	10	39149	SCREW, SHIFT SHAFT BUSHIN	1		
46		44434	SHIFT CAM	1		
47	15	30522A 1	SHIM ASSEMBLY	AR	BEARING TO GEAR HOUSING (	5
48	30	21889	BALL BEARING - FORWARD GE	1		
49	43	48577A 3	FORWARD GEAR	1		
50	31	22458	ROLLER BEARING - FORWAF	1		
51	52	63314	RATCHET, SLIDING CLUTCH	1		
52	17	30535	CROSS PIN - RATCHET TO PRO	1		
53	53	32449	RETAINING RING - CROSS PIN	1		
54		31334	CAM FOLLOWER	1		
55	24	76298	SPRING, COMPRESSION - CAM	1		
56	44	75667A 2	PROPELLER SHAFT	1		
57	43	63316	REVERSE GEAR	1		
58		71479	SLEEVE, THRUST - REVERSE (	1		
59	15	30532A 1	SHIM ASS'Y	AR	THRUST WASHER TO HOUSING	5
60		21889	BALL BEARING - REVERSE GE	1		
61	25	30529	"O" RING, BEARING CARRIER	1		3
62		72673A 1	BEARING CARRIER ASSEMBLY	1		
63	31	22458	ROLLER BEARING - BEARING	1		
64	26	66022	OIL SEAL, BEARING CARRIEF	1		
65		86236	COVER, GEAR HOUSING	1		
66		86665A 1	GUIDE COLLAR, PROPELLER	1		
67	48	77716A10	PROPELLER ASSEMBLY	1	(2 BLADE - ALUMINUM - 7" PITCH	
67	48	63494A10	PROPELLER ASSEMBLY	OPT	(2 BLADE ALUMINUM - 6" PITCH	6
68	23	65439	SPACER, SPLINED - PROPELLER	1		
69	11	89103	PROPELLER NUT	1		
-	27	78139A80	GASKET SET			