



| Parts List | | | | | | |
|------------|-------|----------|-----------------------------------|-----|--|----------|
| Ref | Class | Part | Description | Qty | Comment | Footnote |
| 1 | 1538 | 8456A | DRIVE SHAFT HOUSING ASSEMBLY | 1 | | |
| 1 | 1542 | 8452A | DRIVE SHAFT HOUSING ASSEMBLY | 1 | | |
| 2 | 16 | 66373 | STUD, DRIVE SHAFT HOUSING | 1 | | |
| 3 | 11 | 35814 | NUT, DRIVE SHAFT HOUSING STUD | 1 | | |
| 4 | 11 | 34863 | NUT, GEAR HOUSING STUD | 1 | | |
| 5 | 1539 | 8450A | SADDLE ASSEMBLY | 1 | | |
| 6 | | 64076 | BUMPER, THRUST - SADDLE | 1 | | |
| 7 | | 79896A | MOUNT ASSEMBLY, LOWER - SF | 2 | | |
| 8 | | 79985A | MOUNT ASSEMBLY, UPPER - SF | 2 | | |
| 7 | | 79896A | MOUNT ASSEMBLY, LOWER - LC | 2 | | |
| 8 | | 79896A | MOUNT ASSEMBLY, UPPER - LO | 2 | | |
| 9 | 53 | 26406 | RETAINING RING - UPPER AND LOWER | 4 | | |
| 10 | | 79907 | COVER, UPPER AND LOWER MC | 4 | | |
| 11 | 27 | 59079 | GASKET | 1 | BOTTOM COWL TO DRIVE SHAFT HOUSING TO POSITION | 3 |
| 12 | 11 | 24652 | NUT | 6 | DRIVE SHAFT HOUSING TO POSITION | |
| 13 | 32 | 31940 | TUBE, WATER OUTLET (SHORT) | 1 | | |
| 13 | 32 | 32077 | TUBE, WATER OUTLET (LONG) | 1 | | |
| 14 | 26 | 36556 | SEAL, RUBBER - WATER OUTLET | 1 | | 3 |
| 15 | 23 | 13127 | BEARING, NYLON - OUTLET TUBE | 1 | | |
| 16 | | 71057 | LINK ROD, REVERSE LOCK | 1 | | |
| 17 | 10 | 65414 | SCREW, CAM TO DRIVE SHAFT HOUSING | 2 | | |
| 18 | | 65216 | CAM, REVERSE LOCK | 1 | | |
| 19 | | 72007 | RETAINER, REVERSE LOCK CAM | 1 | | |
| 20 | | 93145 | BLOCK, DRIVE SHAFT (LONG SH) | 1 | | |
| - | 27 | 78139A80 | GASKET SET | | | |