



| Parts List | | | | | | |
|------------|-------|-----------|------------------------------|-----|-----------------------|----------|
| Ref | Class | Part | Description | Qty | Comment | Footnote |
| 1 | | 16837A 2 | ALTERNATOR KIT | 1 | | |
| 2 | | 16074T | ALTERNATOR | 1 | | |
| 3 | 10 | 16059 | SCREW | 2 | | |
| 4 | 54 | 16060 | CLAMP | 1 | | |
| 5 | 10 | 16821 | SCREW | 1 | | |
| - | | 16838A 4 | BATTERY CHARGING KIT (RECTI | 1 | [6 AMP] | |
| 6 | | 16076 | RECTIFIER | 1 | (Use with 20MM Screw) | |
| 6 | | 16076A 1 | RECTIFIER KIT | 1 | (Use with 25MM Screw) | |
| 7 | 89 | 16077 | FUSE | 1 | | |
| 8 | 10 | 16123 | SCREW | 1 | [25MM] | |
| 8 | 10 | 16078 | SCREW | 1 | [20MM] | |
| 9 | 13 | 16079 | LOCKWASHER | 1 | | |
| 10 | 12 | 16080 | WASHER | 1 | | |
| 11 | 54 | 813275 | CLAMP | 1 | | |
| 12 | 11 | 16081 | NUT | 1 | | |
| 13 | 84 | 16082 | EXTENSION HARNESS | 1 | | |
| 14 | | 16839A 4 | VERTICAL ROPE GUIDE KIT | 1 | | |
| 15 | | 16113 | SEAL PLATE | 1 | | |
| 16 | 10 | 17173 | SCREW | 4 | | |
| 17 | | 16841A 2 | FLUSHING ATTACHMENT | 1 | | |
| 18 | 84 | 17175 | HARNESS | 1 | | |
| 19 | | 853828 | HANDLE | 1 | [0.8M] | |
| 19 | | 853828 1 | HANDLE | 1 | [1.0M] | |
| 20 | | 803799A 1 | IGNITION CHECKER | 1 | | |
| 0 | 22 | 135630 3 | CONNECTOR, Fuel (Engine End) | 1 | (For 6.6 Gal.)(25L) | |
| 0 | 22 | 135630 7 | QUICK DISCONNECT (Tank End) | 1 | (For 6.6 Gal.)(25L) | |
| 0 | 22 | 15781A12 | REMOTE/FUEL TANK ADAPTOR | 1 | [4 HP] | |
| 0 | | 12612Q 2 | FLUSHING ATTACHMENT (Allows | 1 | | |
| 0 | | 14171Q 2 | MOTOR LOCK | 1 | | |
| 0 | | 82776 | CABLE & PULLEY ATTACHING KI | 1 | | |