



RECOIL STARTER

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		16092	STARTER HOUSING	1		
2		16095	STARTER SHEAVE	1		
3		16096	PAWL, STARTER SHEAVE	1		
4	53	16097	"E" RING, PAWL	1		
5	24	16098	GUIDE SPRING, PAWL	2		
6	24	16099	GUIDE SPRING, PAWL	1		
7		16100	GUIDE PLATE, SPRING	1		
8		16101	HOUSING, STARTER SPRING	1		
9	24	16102	STARTER SPRING	1		
10		16103	PLATE, STARTER SPRING	1		
11		16104	STARTER SHAFT	1		
12	10	16105	BOLT, STARTER SHAFT	1		
13	12	16106	WASHER, STARTER SHAFT BOL	1		
14	11	16825	NUT, STARTER SHAFT BOLT	1		
15	19	16111	PLUG, STARTER SHEAVE	2		
16	10	16166	BOLT, STARTER HOUSING	3		
17	13	16819	LOCKWASHER, STARTER HOUS	3		
18		16110	PLATE, STARTER	1		
19	50	16108	STARTER ROPE	1		
20		95249	STARTER HANDLE	1		
21	25	16109	"O" RING, STARTER ROPE	1		
22		17634	STARTER LOCK	1		
23	10	17635	SCREW, STARTER LOCK	1		
24	12	17636	WASHER, STARTER LOCK SCRE	1		
25	23	17637	COLLAR, STARTER LOCK	1		
26	244	17638	SPRING, STARTER LOCK	1		
27		812643	CAM, STARTER LOCK	1		
28	10	17640	SHOULDER SCREW, CAM	1		
29	13	17641	WAVE WASHER, SHOULDER SC	1		
30		17642	ROD, STARTER LOCK	1		
31		17643	ROD SNAP	2		