



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	3406	9622	CLAMP BRACKET (STARBOARD)	1		
2	3406	9623	CLAMP BRACKET (PORT)	1		
3	10	95373	BOLT, CLAMP BRACKET	1		
4	12	95375	WASHER, CLAMP BRACKET BOL	2		
5	12	16192	WASHER, CLAMP BRACKET BOL	1		
6	11	16829	NUT, CLAMP BRACKET BOLT	1		
7		16193	DISTANCE PLATE, CLAMP BRACKI	1		
8	10	16194	SCREW, DISTANCE PLATE	2		
9	24	16195	SRPING, CLAMP BRACKET	1		
10	10	16196	SCREW, CLAMP BRACKET SPRIN	1		
11	12	16197	WASHER, CLAMP BRACKET SPR	1		
12		16198	THRUST ROD	1		
13	24	16199	SPRING, THRUST ROD	1		
14	10	16200	CLAMP SCREW ASSEMBLY	2		
15	12	95379	WASHER, CLAMP SCREW	2		
16	3407	813029	SWIVEL BRACKET	1	U.S. S/N A838181 AND UP, BEL	
16	3407	9624	SWIVEL BRACKET	1	U.S. S/N A838180 AND BELOW,	
17	10	16201	BOLT, SWIVEL BRACKET	4		
18	12	16826	WASHER, SWIVEL BRACKET BO	4		
19	23	16202	BUSHING, SWIVEL BRACKET (L	1		
20	23	16203	BUSHING, SWIVEL BRACKET (LC	1		
21		16204	THRUST PLATE	2		
22	10	16206	SCREW, FRICTION PLATE	1		
23	24	95383	SPRING, FRICTION PLATE SCRE	1		
25		16205	FRICTION PLATE, SWIVEL BRAC	2		
26		16207	TILT STOP ASSEMBLY	1		
27		16208	GRIP, TILT STOP	1		
28	23	16209	BUSHING, TILT STOP	2		
29		16210	SET PLATE, TILT STOP	1		
30	10	16211	BOLT, SET PLATE	2		
31	13	16819	LOCKWASHER, SET PLATE SCRI	2		
32	24	16212	SPRING, TILT STOP	1		
33		16213	REVERSE LOCK ARM	1		
34	24	16215	SPRING, REVERSE LOCK ARM (F	1		
35	24	16216	SPRING, REVERSE LOCK ARM (L	1		
36	10	16214	BOLT, REVERSE LOCK ARM	2		
37	12	16826	WASHER, REVERSE LOCK ARM	2		