



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	236	4475A 1	FLYWHEEL ASSEMBLY	1		
2	12	36245	WASHER, FLYWHEEL NUT	1		
3	11	20696	NUT, FLYWHEEL	1		
4	13	35629	WASHER, WAVE-CAM TENSION	1		
5	336	4465	BREAKER CAM	1		
6	336	4524A 1	COVER ASSEMBLY	1		
7	10	60491	SCREW, COVER TO MODULE (5/	2		
8	336	4516A 2	IGNITION MODULE ASSEMBLY	1		
9	10	59800	SCREW, MODULE TO STATOR (5/	2		
10	10	36046	SCREW, MODULE-COIL LEAD (1/	3		
11	13	26996	LOCKWASHER, MODUEL TERMINI	2		
12	11	45076	NUT, MODULE TERMINALS	2		
13	336	4470A 1	COIL, HIGH SPPEED	1		
13	336	4469A 1	COIL, LOW SPEED	1		
14	54	59538	CLIP, COIL RETAINING	2		
15	54	59539	CLIP, COIL RETAINING	2		
16	336	4463	CONDENSER	1		
17	10	62269	SCREW, CONDENSER ATTACHM	2		
18	336	4476A 1	STATOR ASSEMBLY	1		
19	336	4458	PLATE, STATOR HOLD DOWN	2		
20	10	35400	SCREW, HOLD DOWN PLATE TC	4		
21	15	33910015	SHIM, STATOR PLATE TO UPPE	1		
22	336	3989	WICK, CAM WIPER	1		
23	336	4318A 2	MAKER ASSEMBLY, STATOR HO	1		
24	10	56266	SCREW, MAKER TO STATOR HO	2		
25		56520	THROTTLE CAM	1		
26	10	69054	SCREW, THROTTLE CAM TO CO	2		
27	12	37998	WASHER, THROTTLE CAM ATTA	1		
28		56757A 5	JUMPER WIRE ASS'Y	1	CONDENSER TO COVER (BLACK)	
29		56318A11	LEAD ASSEMBLY	1	MODULE TO IGNITION COIL (GF	
30		38938	BOOT, LEAD ASSEMBLY	1		
31		56316A 4	CABLE ASSEMBLY, STATOR HOL	1		
32		38938	BOOT, CABLE	1		
33	336	4460	INSULATOR, CABLE TO CONTACT	1		
34	11	56325	NUT, CABLE INSULATOR	1		
35	336	4528A 3	IGNITION COIL	1		
36	13	26996	LOCKWASHER, IGNITION COIL T	2		
37	11	45076	NUT, IGNITION COIL TERMINAL	2		
38		66355	SCREW	1	COIL COVER TO REAR SUPPORT	
39	10	61530	SCREW	3	COIL COVER TO REAR SUPPORT	
40	11	2716A	NUT, COIL COVER SCREW	2		