



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1538	8456A	DRIVE SHAFT HOUSING ASSEMBLY	1		
1	1542	8452A	DRIVE SHAFT HOUSING ASSEMBLY	1		
2	16	66373	STUD, DRIVE SHAFT HOUSING	1		
3	11	35814	NUT, DRIVE SHAFT HOUSING STUD	1		
4	11	34863	NUT, GEAR HOUSING STUD	1		
5	1539	8450A	SADDLE ASSEMBLY	1		
6		64076	BUMPER, THRUST - SADDLE	1		
7		79896A	MOUNT ASSEMBLY, LOWER - SF	2		
8		79985A	MOUNT ASSEMBLY, UPPER - SF	2		
7		79896A	MOUNT ASSEMBLY, LOWER - LC	2		
8		79896A	MOUNT ASSEMBLY, UPPER - LO	2		
9	53	26406	RETAINING RING - UPPER AND LOWER	4		
10		79907	COVER, UPPER AND LOWER	4		
11	27	59079	GASKET	1	BOTTOM COWL TO DRIVE SHAFT HOUSING TO POSITION	3
12	11	24652	NUT	6	DRIVE SHAFT HOUSING TO POSITION	
13	32	31940	TUBE, WATER OUTLET (SHORT)	1		
13	32	32077	TUBE, WATER OUTLET (LONG)	1		
14	26	36556	SEAL, RUBBER - WATER OUTLET	1		3
15	23	13127	BEARING, NYLON - OUTLET TUBE	1		
16		71057	LINK ROD, REVERSE LOCK	1		
17	10	65414	SCREW, CAM TO DRIVE SHAFT	2		
18		65216	CAM, REVERSE LOCK	1		
19		72007	RETAINER, REVERSE LOCK CAM	1		
20		93145	BLOCK, DRIVE SHAFT (LONG)	1		
-	27	78139A80	GASKET SET			