



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		53238A	FUEL PUMP ASSEMBLY	1		
2	21	30430A	CHECK VALVE ASSEMBLY	2		
3		53245A	DIAPHRAGM KIT, FUEL PUMF	1		2,4
4			GASKET, FUEL PUMP TO B,	1		2,4
5			GASKET, FUEL PUMP	2		2,4
6		53241	BASE, FUEL PUMP	1		
7		61541	COVER, FUEL PUMP	1		
8	10	32627	SCREW, FUEL PUMP TO BASE (1	4		
9	12	20128	WASHER, FUEL PUMP SCREWS	4		
10	22	54064	CONNECTOR, HOSE TO FUEL PL	1	UNITED STATES 3529445 AND I	
11	22	61544	ELBOW, HOSE TO FUEL PUMP (2	1	UNITED STATES 3529445 AND I	
12	32	39079	ELBOW, FUEL PUMP TO CARBU	1		
13	22	52742A	HOSE ASSEMBLY, FUEL PUMP T	1		
14	22	33373	ELBOW, HOSE TO CYLINDER BL	1		
15	54	20387	CLAMP, FUEL PUMP HOSE TO EI	2		
16	32	61642	FUEL LINE, INLET - ADAPTOR TC	1		
17		30188	CUP WASHER, ADAPTOR	1		
18	24	23067	SPRING, ADAPTOR STEM	1		
19	25	20415	"O" RING, ADAPTOR STEM	1		2,4
20		23069	STEM, CHECK UNIT ADAPTOR	1		
21		22833	ADAPTOR, CHECK UNIT	1		
22	10	37923	SCREW, CHECK UNIT ADAPTOR	1		