



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		89977A 1	FUEL PUMP ASSEMBLY	1		
2	21	30430A 2	CHECK VALVE ASSEMBLY	1		
3		53245A 1	DIAPHRAGM KIT	1		0
4			GASKET	1		0
5			GASKET	2		0
6		53241	BASE	1		
7		53239	COVER	1		
8	10	32627	SCREW (1-1/2")	4		
9	12	20128	WASHER	4		
10		NLA	ELBOW (90)	1		
11	32	99126 88	HOSE	1		
12	22	33373	ELBOW (90)	1		
13	54	20387	CLAMP	2		
14	32	53800	FUEL LINE (SERIAL# & BELOW)	1	SERIAL 00000000-03028360	
14		NLA	FUEL LINE (SERIAL#& UP)	1	SERIAL 03028361-09999999	
15		32454	ADAPTOR	1		
16		NLA	SCREW (1-1/2")	2	SERIAL 00000000-02923268	
16	10	73656	SCREW (1-3/8")	2	SERIAL 02923269-03028360	
16	10	23702	SCREW (1-1/8")	2	SERIAL 03028361-09999999	
17	24	28357	SPRING	2		
18	11	20110	NUT	2	SERIAL 00000000-02927900	