



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		39082A 4	FUEL PUMP ASSEMBLY	1		
2	21	22974A 3	CHECK VALVE ASSEMBLY	1		
3		31503A 1	DIAPHRAGM KIT	1		
4			GASKET	1		
5		NLA	SPACER	1	SERIAL 00000000-01865632	
6	10	23702	SCREW (7/8")	4	SERIAL 00000000-01865632	
7	11	68219	NUT	4	SERIAL 00000000-01865632	
5		NLA	SPACER	1	SERIAL 01865633-09999999	
6	10	22411	SCREW (1")	4	SERIAL 01865633-09999999	
8		NLA	ELBOW (90)	1		
9		NLA	ELBOW (45)	1		
10	32	99126 88	HOSE	1		
11	22	33373	ELBOW (90)	1		
12	54	20387	CLAMP	2		
13	32	53800	FUEL LINE	1		
14		32454	ADAPTOR	1		
15		NLA	SCREW	2		
16	24	28357	SPRING	2		
17	11	20110	NUT	2		