

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	236	4475A 1	FLYWHEEL ASSEMBLY	1		
2	28	20094	KEY, FLYWHEEL DRIVE	2		
3	25	36284	"O" RING, FLYWHEEL NUT	1		2,4
4	12	36282	WASHER, FLYWHEEL NUT	1		
5	11	20696	NUT, FLYWHEEL	1		
6	13	35629	WASHER, WAVE - CAM TENSION	1		
7	336	4465	CAM, BREAKER	1		
8	336	4528A 1	COIL ASSEMBLY, IGNITION	1		
9	13	26996	LOCKWASER, IGNITION COIL TE	2		
10	11	45076	NUT, IGNITION COIL TERMINAL	2		
11		61532	COVER, IGNITION COIL	1		
12	10	61530	SCREW, COIL COVER TO REAR	3		
13	11	27164	NUT, COIL COVER SCREW	3		
14		47899A 9	LEAD ASSEMBLY, HIGH TENSION	1		
15	332	2854	NIPPLE, IGNITION COIL	1		
16		47604A 1	PROTECTOR ASSEMBLY, SPARK	1		
17	33	58194	SPARK PLUG (AC #40FFK)	1		

