



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2154	7603	BOTTOM COWL	1		
2		71493	3 MOLDING, BOTTOM COWL (2"-6	5		
3		70455	COVER, BOTTOM COWL	1		
4	10	69079	SCREW, COVER TO BOTTOM CO	2		
5		86055	HANDLE, SHIFT	1		
6		86056A	1 SHAFT, SHIFT	1		
7	10	69560	SCREW, SHIFT HANDLE TO SHA	1		
8	13	26996	LOCKWASHER, SHIFT HANDLE	1		
9		66414	CAM, SHIFT DETENT	1		
10	17	25905	ROLL PIN, CAM TO SHIFT SHAFT	1		
11	23	26856	BUSHING, SHIFT SHAFT	2		
12	25	20415	"O" RING, SHIFT SHAFT	1		5
13		72733	ARM, SHIFT	1		
14	10	72734	SET SCREW, SHIFT ARM (5/16")	1		
15	18	21071	COTTER PIN, SHIFT SHAFT	1		
16	24	39627	SPRING, DETENT	1		
17		39601	PLATE, DETENT SPRING	1		
18	10	25764	SCREW, DETENT SPRING TO BC	2		
19	27	68940	GASKET, DRIVE SHAFT HSG./BC	1	UNITED STATES 5805430 AND I	5
19	27	92874	GASKET, DRIVE SHAFT HSG./BC	1	UNITED STATES 5805431 AND I	5
20	53	72168	"E" RING, RETAINER	1		
21		78303	RETAINER, STARTER ROPE	1	UNITED STATES 5805430 AND I	
21		70393	RETAINER, STARTER ROPE	1	UNITED STATES 5805431 AND I	
22	19	74258	PLUG, BOTTOM COWL - FUEL AC	1		
23		70462	ARM, LATCH CRANK	1		
24	24	70459	SPRING, LATCH CRANK	1		
25		75263	CRANK, FRONT LATCH	1		
26	13	34632	WAVE WASHER, LATCH HANDLE	2		
27		70460	HANDLE, LATCH BOTTOM COWL	1	UNITED STATES 5805430 AND I	
27		92798	HANDLE, LATCH BOTTOM COWL	1	UNITED STATES 5805431 AND I	
28	17	38489	ROLL PIN, LATCH HANDLE TO CI	1		
29		74802	STOP, SHIFT ARM	1		
30	23	93171	BUSHING, BOTTOM COWL	1		