



Parts List					Qty	Comment	Footnote
Ref	Class	Part	Description				
1	247	7933A 2	FLYWHEEL ASSEMBLY	1			
2	28	20094	KEY, FLYWHEEL RIVE	1			
3	12	25970	WASHER, FLYWHEEL	1			
4	11	20509	NUT, FLYWHEEL	1			
5	339	5566A 5	STATOR ASSEMBLY	1			
6	10	66707	SCREW, STATOR TO MOUNTING	3			
7	339	5589A 1	COIL ASSEMBLY (2 1/4" AND 4 1.	1			
7	339	5590A 1	COIL ASSEMBLY (3 3/8" AND 4 3.	1			
8	54	59538	CLIP, COIL RETAINING	2			
9	54	65927	CLIP, COIL RETAINING	2			
10	86	69348	TERMINAL BLOCK, STATOR	1			
10A	13	58308	LOCKWASHER, TERMINAL BLOC	1			
11	10	22654	SCREW, LEADS TO TERMINAL B	1			
12	10	69347	SCREW, TERMINAL BLOCK TO S	1			
13	11	46438	NUT, TERMINAL BLOCK SCREW	1			
14		70426A 3	TRIGGER ASSEMBLY	1			
17		70414	LINK ROD, TRIGGER TO SPARK	1			
18	11	68219	NUT, ADJUSTING LINK ROD	2			
19		33973	SWIVEL BOLT, LINK ROD	1			
20		70428	BRACKET, STATOR MOUNTING	1			
21	10	20512	SCREW, STATOR MOUNTING BF	2			
22		70422	LEVER, SPARK	1			
23	10	62802	SCREW, ADJUSTNG - SPARK LE'	1			
24	11	21923	NUT, ADJUSTING SCREW	1			
25	24	70418	SPRING, THROTTLE LEVER	1			
26		70424	THROTTLE LEVER	1			
27		70429	THROTTLE CAM	1			
28	10	38055	SCREW, THROTTLE CAM TO TH	1			
29	12	56681	WASHER, THROTTLE CAM SCRE	1			
30	10	38515	SCREW, SHOULDER (7/8")	1			
31	12	21631	WASHER, SHOULDER SCREW	1			