



STARTER HOUSING ASSEMBLY

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	11	20166	NUT, SHEAVE SHAFT (LEFT HAN	1		
2	14	61004	TAB WASHER, SHEAVE SHAFT N	1		
3	25	39597	GROMMET, STARTER HOUSING	2		
4		76141	CABLE ASSEMBLY, INTERLOCK -	1		
5	10	32228	SCREW, CABLE TO EXHAUST PL	1		
6	10	69022	SCREW, CABLE TO STARTER HC	1	MANUAL	
7		98442	CAM, INTERLOCK - MANUAL	1		
8	10	76138	SCREW, INTERLOCK CAM ATTACH	1	MANUAL	
9	24	76140	SPRING, INTERLOCK CAM SCREW	1		
10		79371	ACTUATOR, INTERLOCK - MANU	1		
11	10	76137	SCREW, INTERLOCK ACTUATOR	1	MANUAL	
12	24	76139	SPRING, INTERLOCK ACTUATOR	1		
13	12	30191	WASHER, INTERLOCK CABLE - M	1		
14	18	27769	COTTER PIN, INTERLOCK CABLE	1	MANUAL	
15		93695	PULLEY, STARTER SCREW	1		
16	10	45210	SCREW, PULLEY TO STARTER F	1		
17	12	22887	WASHER, PULLEY SCREW	2		
18	23	30977	SPACER, PULLEY SCREW	1		
19		94121	RETAINER, STARTER ROPE	1		
20	11	24656	NUT, PULLEY SCREW	1		
21		76080A	STARTER HOUSING	1		
22	10	88759	SCREW, STARTER HOUSING TO	2		
23	13	26993	LOCKWASHER, STARTER HOUS	2		
24		61002	PLATE, STARTER REWIND	1		
25	24	39502A	SPRING, STARTER REWIND	1		
26	23	87649	BUSHING, SPRING GUIDE	1		
27	50	94338A	STARTER SHEAVE	1		
28		91936	STARTER PAWL	1		
29	24	87651	SPRING, STARTER PAWL	1		
30	53	87706	"E" RING, STARTER PAWL	1		
31	23	63061	SPACER, SHEAVE SHAFT	1		
33		94962A	LEVER ASSEMBLY	1		
34	13	20160	WAVE WASHER	1		
35		87656	SHEAVE SHAFT	1		
36	50	28985A	STARTER ROPE ASSEMBLY	1		
36		47341A	STARTER ROPE ASSEMBLY (FOR	1		
37		79470A	RETAINER ASSEMBLY, STARTER	1		