



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	2138	6341	TOP COWL ASSEMBLY (ELECTRI	1	
1	2138	6340A 2	TOP COWL ASSEMBLY (MANUAL	1	
2		77859A 1	GUIDE, STARTER ROPE (ALUM	1	
3		77860	RING, RETAINING - ROPE GUI	1	
2		58657	GUIDE, STARTER ROPE (PLAS	1	
3	53	72168	RING, RETAINING - ROPE GUI	1	
4		62236	SHIELD, REAR - TOP COWL	1	
5	10	48409	SCREW, REAR SHIELD TO TOP	3	
6	12	26014	WASHER, REAR SHIELD SCREW	3	
7		55455	HOOK, TOP COWL LATCH - REAF	1	
8	10	22956	SCREW, REAR HOOK TO TOP CC	2	
9	13	26992	LOCKWASHER, REAR HOOK SCF	2	
10		75973	PLATE, HINGE	1	
11	10	32228	SCREW, HINGE PLATE (5/8")	2	
12	13	26996	LOCKWASHER, HINGE PLATE SC	2	
13		94918	LEVER, COWL LATCH	1	
14		52739	HINGE, COWL LATCH LEVER	1	
15	17	58998	ROLL PIN, HINGE TO LEVER	1	
16	2137	3878A 6	WRAP AROUND COWL ASSEMBL	1	6
17		76259	BLANKET, SOUND ABSORBING	1	(EARLY STYLE ENGINES)
18		46785A 1	COWL LATCH ASSEMBLY	2	
19		30413	HOOK, COWL LATCH FASTENIN	2	
20	2161	6347A 6	COWL FRONT COVER ASSEMBL	1	6
21		76450	BLANKET, COWL FRONT COVE	1	