



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	11	22339	NUT, FLYWHEEL	1	
2	12	36258	WASHER, FLYWHEEL NUT	1	
3	242	7912A14	FLYWHEEL ASSEMBLY (MANUAL)	1	
3	242	7912A 8	FLYWHEEL ASSEMBLY (ELECTR)	1	
3	242	7912A12	FLYWHEEL ASSEMBLY (ELECTR)	1	
4		41409A 1	INERTIA RING ASSEMBLY	1	
5	10	32417	SCREW, FLYWHEEL (5/8")	8	
6	50	65213	RATCHET, FLYWHEEL MANUA	1	
7	10	69088	SCREW, RATCHET TO FLYWHI	8	
8	13	20202	LOCKWASHER, RATCHET SCR	2	
9		86617A 5	STATOR ASSEMBLY, IGNITION	1	
10	10	77363	SCREW, STATOR TO UPPER EN	2	
10	10	76566	SCREW, STATOR TO UPPER EN	2	
11		86704A 2	STATOR ASSEMBLY, CHARGING	1	
12	10	93787	SCREW, STATOR TO UPPER EN	3	(ELECTRIC)
13		95707	STATOR SUPPORT	1	
14		92431A 1	TRIGGER PLATE ASSEMBLY	1	
15	339	7370A 8	IGNITION COIL ASSEMBLY	2	
16	11	45076	NUT, COIL TERMINAL	4	
17	84	60466A 1	GROUND WIRE, COIL COVER SC	2	
18		76254	COVER, IGNITION COIL	2	
19	10	69002	SCREW, COVER TO COIL BRACK	2	
19	10	93460	SCREW, COVER TO COIL BRACK	4	
20	84	93475A25	LEAD ASSEMBLY, SPARK PLUG	2	
21	85	63709A 1	PROTECTOR ASSEMBLY, SPAF	2	
22	332	2854	BOOT, IGNITION COIL	2	
23	33	57451	SPARK PLUG (AC#V-40FFM)	2	FOR CANADA AND BELGIUM, U:
24	54	54457	"J" CLIP, LEAD WIRES	1	
25		61990	STA-STRAP	2	
26	339	7452A 3	SWITCH BOX ASSEMBLY	1	
27	10	73484	SCREW, SWITCH BOX TO BRACK	3	
28	13	69432	LOCKWASHER, GROUND	1	
29	11	45076	NUT, SWITCH BOX TERMINAL	6	
30	84	94295A 1	HARNES ASSEMBLY, PRIMARY	1	