



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	11	22339	NUT, FLYWHEEL	1		
2	12	68229	WASHER, FLYWHEEL NUT	1		
3	242	4764A28	FLYWHEEL ASSEMBLY (MANUAL)	1		
3	242	4764A25	FLYWHEEL ASSEMBLY (ELECTR)	1		
4	10	32417	SCREW, FLEXIBLE PLATE TO F	8		
5	50	65213	RATCHET, FLYWHEEL - MANU	1		
6	10	69088	SCREW, RATCHET TO FLYWHI	8		
7	13	20202	LOCKWASHER, RATCHET SCR	2		
8	398	5256	STATOR, IGNITION (MANUAL)	1		
8	398	5255	STATOR, ALTERNATOR (ELECTF	1		
9	10	56787	SCREW, STATOR TO UPPER EN	4		
10	13	26996	LOCKWASHER, STATOR SCREW	4		
11		61830	STATOR SUPPORT	1		
12	338	4731A 6	TRIGGER PLATE ASSEMBLY	1		
13	24	62095	SPRING, COMPRESSION	1		
14	17	62768	PIN, SPRING RETENTION	1		
15	12	62133	WASHER, TRIGGER TO STATOR	1		
16	13	61983	WASHER, WAVE	1	TRIGGER TO STATOR SUPPOR	
17	12	61982	WASHER, TRIGGER TO STATOR	1		
18	54	54457	"J" CLIP	1	TRIGGER LEADS TO RUBBER S	
19		61990	STA-STRAP, STATOR LEADS	1		
20	339	5288A 2	IGNITION COIL ASSEMBLY, COMI	2		
21	11	45076	NUT, COIL TERMINALS	4		
22	84	60466A 1	GROUND WIRE	2	COIL GROUND TO COIL COVER	
23		76254	COVER, IGNITION COIL	2		
24	10	69002	SCREW, COIL COVER TO COIL BI	2		
24	10	60194	SCREW, COIL COVER TO COIL BI	4		
25	84	93475A25	LEAD ASSEMBLY, SPARK PLUG	2		
26	85	63709A 1	PROTECTOR ASSEMBLY, SPAF	2		
27	332	2854	BOOT, LEAD TO IGNITION COIL	2		
28	33	57451	SPARK PLUG (AV#V-40FFM)	2	FOR CANADA AND BELGIUM, U:	
29	332	4911A 5	SWITCH BOX ASSEMBLY, COMPI	1		
30	54	54457	"J" CLIP, SWITCH BOX LEADS	2		
31	10	69067	SCREW, SWITCH BOX AND "J" C	2		
32	10	45218	SCREW, TERMINAL BLOCK AND	6		
33	86	66754	TERMINAL BLOCK, SWITCH BOX	1		
34	10	20646	SCREW, TERMINAL BLOCK ATT/	2		
35	11	20190	NUT, TERMINAL BLOCK ATTACH	2		