



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2138	6341	TOP COWL ASSEMBLY (ELECTRI	1		
1	2138	6340A 2	TOP COWL ASSEMBLY (MANUAL	1		
2		77859A 1	GUIDE, STARTER ROPE (ALUM	1		
3		77860	RING, RETAINING - ROPE GUIE	1		
2		58657	GUIDE, STARTER ROPE (PLAS	1		
3	53	72168	RING, RETAINING - ROPE GUIE	1		
4		62236	SHIELD, REAR - TOP COWL	1		
5	10	48409	SCREW, REAR SHIELD TO TOP (	3		
6	12	26014	WASHER, REAR SHIELD SCREW	3		
7		55455	HOOK, TOP COWL LATCH - REAF	1		
8	10	22956	SCREW, REAR HOOK TO TOP CC	1		
9	13	26992	LOCKWASHER, REAR HOOK SCF	2		
10		75973	PLATE, HINGE	1		
11	10	32228	SCREW, HINGE PLATE (5/8")	2		
12	13	26996	LOCKWASHER, HINGE PLATE SC	2		
13		94918	LEVER, COWL LATCH	1		
14		52739	HINGE, COWL LATCH LEVER	1		
15	17	58998	ROLL PIN, HINGE TO LEVER	1		
16	2137	3878A 6	WRAP AROUND COWL ASSEMBL	1		6
17		76259	BLANKET, SOUND ABSORBING	1	(EARLY STYLE ENGINES)	
18		46785A 1	COWL LATCH ASSEMBLY	2		
19		30413	HOOK, COWL LATCH FASTENIN	2		
20	2161	6347A 6	COWL FRONT COVER ASSEMBL	1		6
21		76450	BLANKET, COWL FRONT COVE	1		