

NO IMAGE

| Parts List |       |          |                             |     |                |          |
|------------|-------|----------|-----------------------------|-----|----------------|----------|
| Ref        | Class | Part     | Description                 | Qty | Comment        | Footnote |
| -          | 91    | 78473    | INDICATOR TOOL, Backlash    | 1   | (Gear Housing) |          |
| -          | 91    | 19660    | INDICATOR TOOL, Backlash    | 1   | (Gear Housing) |          |
| -          | 91    | 817007T  | BEARING CARRIER SEAL INSTAL | 1   | (Gear Housing) |          |
| -          | 91    | 825199   | PILOT                       | 1   | (Gear Housing) |          |
| -          | 91    | 13945    | INSTALLATION TOOL, Bearing  | 1   | (Gear Housing) |          |
| -          | 91    | 14309T02 | INSTALLATION TOOL, Bearing  | 1   | (Gear Housing) |          |
| -          | 91    | 14311A04 | TOOL, Preload               | 1   | (Gear Housing) |          |
| -          | 91    | 83165T   | PULLER ASSEMBLY             | 1   | (Gear Housing) |          |
| -          | 91    | 14308T02 | BEARING RACE TOOL           | 1   | (Gear Housing) |          |
| -          | 91    | 31229A   | PULLER KIT, Bearing         | 1   | (Gear Housing) |          |
| -          | 11    | 24156    | NUT, (.625-18)              | 1   | (Gear Housing) |          |
| -          | 91    | 15755T   | MANDREL                     | 1   | (Gear Housing) |          |
| -          | 91    | 36569T   | DRIVEHEAD TOOL              | 1   | (Gear Housing) |          |
| -          | 91    | 37312T   | DRIVER HEAD                 | 1   | (Gear Housing) |          |
| -          | 91    | 37323    | DRIVER ROD                  | 1   | (Gear Housing) |          |
| -          | 91    | 36571T   | DRIVESHAFT BEARING WRENI    | 1   | (Gear Housing) |          |
| -          | 91    | 37350T   | MANDREL                     | 1   | (Gear Housing) |          |
| -          | 91    | 29310    | PLATE                       | 1   | (Gear Housing) |          |
| -          | 12    | 34961    | WASHER                      | 1   | (Gear Housing) |          |
| -          | 91    | 43506T   | BEARING RETAINING TOOL      | 1   | (Gear Housing) |          |
| -          | 91    | 825200A  | SPRING HOOK                 | 1   | (Gear Housing) |          |
| -          | 91    | 83155    | ADAPTER KIT, Dial Indicator | 1   | (Gear Housing) |          |
| -          | 91    | 58222A   | DIAL INDICATOR TOOL         | 1   | (Gear Housing) |          |
| -          | 91    | 13779    | BEARING REMOVER             | 1   | (Gear Housing) |          |
| -          | 91    | 817009T  | FORWARD GEAR BEARING RACI   | 1   | (Gear Housing) |          |
| -          | 91    | 817070   | DRIVESHAFT HOLDING TOOL     | 1   | (Gear Housing) |          |
| -          | 91    | 825196   | DRIVESHAFT HOLDING TOOL     | 1   | (Gear Housing) |          |
| -          | 91    | 817005   | FORWARD GEAR BEARING INST   | 1   | (Gear Housing) |          |
| -          | 91    | 826872   | FORWARD GEAR BEARING INST   | 1   | (Gear Housing) |          |
| -          | 91    | 817058A  | LOWER DRIVESHAFT BEARING I  | 1   | (Gear Housing) |          |
| -          | 91    | 817011T  | NEEDLE BEARING CARRIER INS  | 1   | (Gear Housing) |          |
| -          | 91    | 13949    | DRIVER, Oil Seal            | 1   | (Gear Housing) |          |
| -          | 91    | 31108T   | DRIVER, Oil Seal            | 1   | (Gear Housing) |          |
| -          | 91    | 825197T  | OIL SEAL TOOL               | 1   | (Gear Housing) |          |
| -          | 91    | 825198   | MANDREL                     | 1   | (Gear Housing) |          |
| -          | 91    | 817008A  | PINION GEAR LOCATION TOOL   | 1   | (Gear Housing) |          |
| -          | 91    | 12349A   | LOCATION TOOL, Pinion       | 1   | (Gear Housing) |          |
| -          | 91    | 27780    | PULLER                      | 1   | (Gear Housing) |          |
| -          | 91    | 85716    | PULLER BOLT                 | 1   | (Gear Housing) |          |
| -          | 91    | 46086A   | PULLER JAW ASSEMBLY         | 1   | (Gear Housing) |          |
| -          | 91    | 27241    | PULLER PLATE                | 1   | (Gear Housing) |          |