



2192

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		832991T 3	EXHAUST VALVE	4		6
2		832990T 3	INTAKE VALVE	4		6
3	26	858271	SEAL	8		6
4	24	858268	VALVE SPRING-OUTER	8		6
5		822650	RETAINER	8		6
6	28	822651	KEY	16		6
7		825045A 2	ROCKER ARM	8		6
8	10	825046	SCREW	8		6
9	11	826150	NUT	8		6
10		857085 1	ROCKER SHAFT	1		6
11		NSS	NOT SOLD SEPARATE, Plug	2		6
12		859577	BRACKET	2		6
13		858275	BRACKET	1		6
14	24	825052 1	SPRING	2		6
15	10	875218	SCREW, (M8 x 23)	5		6
16	27	859576	SEAL CAP	1		6
17	17	859575	PIN	1		6
18	24	889775	SPRING, Overload	2		6
.		857082A 9	CYLINDER HEAD ASSEMBLY	1		