



18034

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	853805A 3	STARTER MOTOR	1		23
2		853806 1	PINION	1		23
3	12	95392 6	WASHER	1		23
4		853807T02	BRUSH HOLDER	1		23
5	10	16821	SCREW	2		23
6	23	95286 14	BUSHING	1		23
7	25	16178 4	O-RING	1		23
8	23	95286 19	BUSHING	1		23
9	12	16826	WASHER	1		23
10	13	40025 6	LOCKWASHER, (M6)	2		23
11	11	853722026	NUT	2		23
12	10	16263 2	BOLT	2		23
13	13	898101181	LOCKWASHER	2		23
14	12	898101215	WASHER	2		23
15	89	853809	STARTER SOLENOID	1		23
16	10	16223 3	SCREW	1		23
17		851836 2	BRACKET	1		23
18	10	16223 4	BOLT	2		23
19		851838	COVER	1		
20	10	823042073	SCREW	2		23
21		851836	BRACKET	1		
22		851836 1	BRACKET	1		23
23	10	823042073	SCREW	4		
24	10	823042052	BOLT	1		23
25	10	40003 30	SCREW, (M6 x 25)	3		
26	12	895118002	WASHER	3		
27	23	95286 24	COLLAR	3		
28	12	95392 3	WASHER, (Rubber)	3		
29		851837	RUBBER MOUNT	1		23
30	84	853740 3	CABLE	1		23
31	85	853816 1	CAP	2		23
32	84	853740 4	BATTERY WIRE	1		23
33	85	853816	CAP	1		23
34	10	16211 1	BOLT	1		
35	54	95306	CLAMP	1		
36	10	16223 1	BOLT	1		
37		898101257	STOPPER	1		
-		804056A 1	ELECTRIC STARTER KIT	1		