



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	247	6575A 2	FLYWHEEL ASSEMBLY	1		
2	28	20094	KEY, FLYWHEEL DRIVE	1		
3	12	25970	WASHER, FLYWHEEL	1		
4	11	20509	NUT, FLYWHEEL	1		
5	339	5566A 5	STATOR ASSEMBLY	1		
6	10	66707	SCREW, STATOR TO MOUNTING	3		
7	339	5589A 1	COIL ASSEMBLY (2 1/4" AND 4 1/4")	1		
7	339	5590A 1	COIL ASSEMBLY (3 3/8" AND 4 3/8")	1		
8	54	59538	CLIP, COIL RETAINING	2		
9	54	65927	CLIP, COIL RETAINING	2		
10	86	69348	TERMINAL BLOCK, STATOR	1		
10A	13	58308	LOCKWASHER, TERMINAL BLOC	1		
11	10	22654	SCREW, LEADS TO TERMINAL B	1		
12	10	69347	SCREW, TERMINAL BLOCK TO S	1		
13	11	46438	NUT, TERMINAL BLOCK SCREW	1		
14		70426A 2	TRIGGER ASSEMBLY	1		
17		70414	LINK ROD, TRIGGER TO SPARK	1		
18	11	68219	NUT, ADJUSTING LINK ROD	2		
19		33973	SWIVEL BOLT, LINK ROD	1		
20		70428	BRACKET, STATOR MOUNTING	1		
21	10	25157	SCREW, STATOR MOUNTING BF	2		
22		70422	LEVER, SPARK	1		
23	10	62802	SCREW, ADJUSTING - SPARK LE	1		
24	11	21923	NUT, ADJUSTING SCREW	1		
25	24	70418	SPRING, THROTTLE LEVER	1		
26		70424	THROTTLE LEVER	1		
27		70429	THROTTLE CAM	1		
28	10	38055	SCREW	1	THROTTLE CAM TO THROTTLE	
29	12	56681	WASHER, THROTTLE CAM SCRE	1		
30	10	38515	SCREW, SHOULDER (7/8")	1		
31	12	21631	WASHER, SHOULDER SCREW	1		
32	24	70167	SPRING, STARTER REWIND	1		
33		70170A 1	BRACKET ASSEMBLY, STARTER	1		
34	10	37571	SCREW, BRACKET TO CYLINDER	3		
34A	12	30164	WASHER, BRACKET TO CYLINDER	2		
35		77568	STARTER SHEAVE	1		
36	50	71917A 3	STARTER ROPE ASSEMBLY (INC	1		
37		70396	HANDLE, STARTER ROPE	1		
38		70394	CAP, STARTER HANDLE	1		
39	43	77514	PINION, STARTER REWIND	1		
39A	12	20164	WASHER, PINION	2		