



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
	1648	5559A 2	GEAR HOUSING ASSY, COMP. (S	1	SERIAL #9210545 AND BELOW	
	1648	5559A 4	GEAR HOUSING ASSY, COMP. (L	1	SERIAL #9210545 AND BELOW	
	1648	5559A10	GEAR HOUSING ASSY, COMP. (S	1	SERIAL #9210546 AND UP	
	1648	5559A11	GEAR HOUSING ASSY, COMP. (L	1	SERIAL #9210546 AND UP	
1	1648	5559A 3	GEAR HOUSING ASSEMBLY	1		
33	11	20696	NUT, PROPELLER SHAFT	1		
34	12	73672	WASHER, PROPELLER SHAFT	1		
35	43	68980	DRIVE GEAR	1		
36	24	68934	SPRING, CLUTCH	1		
37	15	69516A 1	SHIM ASSEMBLY, BALL BEARIN	1		
38	30	70894	BALL BEARING, DRIVE GEAR	1		
39	11	69515	NUT, DRIVE GEAR	1		
40	44	68982	PROPELLER SHAFT	1		
41		69517	SPACER, PROPELLER SHAFT	1	SERIAL #9210545 AND BELOW	
42		68960A 1	BEARING CARRIER ASSEMBLY	1	SERIAL #9210545 AND BELOW	
43	31	21145	ROLLER BEARING	1	SERIAL #9210545 AND BELOW	
44	26	71140	OIL SEAL	1	SERIAL #9210545 AND BELOW	
45		68956	COVER, GEAR HOUSING	1	SERIAL #9210545 AND BELOW	
41		75816	SPACER, PROPELLER SHAFT	1	SERIAL #9210546 AND UP	
42		77431A 1	BEARING CARRIER ASSEMBLY	1	SERIAL #9210546 AND UP	
44	26	71140	OIL SEAL	1	SERIAL #9210546 AND UP	
45		75812	COVER, GEAR HOUSING	1	SERIAL #9210546 AND UP	
46	25	68935	"O" RING, BEARING CARRIER	1		1
47	28	32003	KEY, BEARING CARRIER	1		
48	12	68923	WASHER, GEAR HOUSING COV	1	SERIAL #9141798 AND BELOW	
49		70588	THRUST HUB, FORWARD	1		
50	48	70453A 1	PROPELLER ASSEMBLY	1		
51		70589	THRUST HUB, AFT	1		
52	11	35814	NUT, PROPELLER	1		
53	11	35814	NUT, DRIVE SHAFT HOUSING S1	1		
-	27	68938A75	GASKET SET			