



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2154	5621	BOTTOM COWL (SERIAL #91417	1		
1	2154	6349	BOTTOM COWL (SERIAL #91417	1		
2		71493 3	MOLDING, BOTTOM COWL (2" - E	5		
3		70455	COVER, BOTTOM COWL	1		
4	10	69079	SCREW, COVER TO BOTTOM CO	2		
5		70392	HANDLE, SHIFT SERIAL	1	#9210545 AND BELOW	
6		68977	SHAFT, SHIFT	1	#9210545 AND BELOW	
7	10	70182	SCREW, SHIFT HANDLE TO SHA	1	#9210545 AND BELOW	
8	13	26994	LOCKWASHER, SHIFT HANDLE	1	#9210545 AND BELOW	
5		86055	HANDLE, SHIFT SERIAL	1	#9210546 AND UP	
6		86056A 1	SHAFT, SHIFT	1	#9210546 AND UP	
7	10	69560	SCREW, SHIFT HANDLE TO SHA	1	#9210546 AND UP	
8	13	26996	LOCKWASHER, SHIFT HANDLE	1	#9210546 AND UP	
9		66414	CAM, SHIFT DETENT	1		
10	17	25905	ROLL PIN, CAM TO SHIFT SHAFT	1		
11	23	26856	BUSHING, SHIFT SHAFT	2		
12	25	20415	"O" RING, SHIFT SHAFT	1		4
13		72733	ARM, SHIFT	1		
14	10	72734	SET SCREW, SHIFT ARM (5/16")	1		
15	18	21071	COTTER PIN, SHIFT SHAFT	1		
16	24	39627	SPRING, DETENT	1		
17		39601	PLATE, DETENT SPRING	1		
18	10	25764	SCREW, DETENT SPRING TO BC	2		
19	27	68940	GASKET, DRIVE SHAFT HOUSING	1		1
20		69602	TRIM COVER	1	SERIAL #9141798 AND BELOW	
21	10	37571	SCREW, TRIM COVER TO BOTTC	6	SERIAL #9141798 AND BELOW	
21	10	75827	SCREW, TRIM COVER TO BOTTC	1	SERIAL #9141798 AND BELOW	
22	53	58656	"E" RING, RETAINER	1		
23		70393	RETAINER, STARTER HANDLE	1	(SERIAL #9190379 AND BELOW	
23		78303	RETAINER, STARTER HANDLE	1	(SERIAL #9190380 AND UP)	
24	19	74258	PLUG, BOTTOM COWL - FUEL AC	1		
25		70462	ARM, LATCH CRANK	1		
26	24	70459	SPRING, LATCH CRANK	1		
27		75263	CRANK, FRONT LATCH	1		
28	13	34632	WAVE WASHER, LATCH HANDLE	1		
29		70460	HANDLE, LATCH BOTTOM COWL	1		
30	17	38489	ROLL PIN, LATCH HANDLE TO CI	1		
31		74802	STOP, SHIFT ARM	1		
-	27	68938A75	GASKET SET			