



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	444	3875A 2	CRANKSHAFT ASSEMBLY	1		
2	30	32117	BALL BEARING, CRANKSHAFT	1		
3	540	3943A 1	MAIN BEARING ASSEMBLY, VAL	1		
4	17	20032	DOWEL PIN, MAIN BEARING	2		
5	10	45775	SCREW, MAIN BEARING CLAMP	2		
6	11	45774	NUT, MAIN BEARING CLAMP	2		
7	34	56007A 1	REED SET, MAIN BEARING (MA	1		
8	34	56008	REED STOP, MAIN BEARING R	4		
9	10	20055	SCREW, REED STOP MOUNTIN	12		
10	622	3666A 6	CONNECTING ROD ASSEMBLY	2		
11	10	54803	SCREW, CONNECTING ROD	4		
12	11	49091	NUT, CONNECTING ROD SCRE	4		
13	31	58859A 1	BEARING ASSEMBLY, CRANKP	2		
14	29	47270	BEARING, NEEDLE - PISTON PI	58		
15	12	47247	WASHER, NEEDLE BEARING R	4		
16	745	4508A 2	PISTON AND PISTON PIN ASSE	2	SERIAL 00000000-03045259	
16	745	3560A 2	PISTON AND PISTON PIN ASSE	2	SERIAL 03045260-09999999	
17	40	52035	LOCK RING, PISTON PIN	4		
18	39	45155A12	RING, PISTON	1		
-	745	4513A 1	PISTON AND PISTON PIN ASSE	2	SERIAL 00000000-03045259	
-	745	3778A 1	PISTON AND PISTON PIN ASSE	2	SERIAL 03045260-09999999	
-	39	45204A12	RING, PISTON (.015 OVERSIZE	1		