



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1626	4005A 4	GEAR HOUSING ASSEMBLY, CO	1	SERIAL 00000000-02979678	
-	1626	4005A 5	GEAR HOUSING ASSEMBLY, CO	1	SERIAL 00000000-02979678	
-	1626	3927A 4	GEAR HOUSING ASSEMBLY, CO	1	SERIAL 03043031-09999999	
-	1626	3927A 5	GEAR HOUSING ASSEMBLY, CO	1	SERIAL 03043031-09999999	
1	1626	4005A 6	GEAR HOUSING ASSEMBLY	1	SERIAL 00000000-02979678	
1	1626	3927A 6	GEAR HOUSING ASSEMBLY	1	SERIAL 03043031-09999999	
3	17	21438	PIN, DOWEL - GEAR HOUSIN	1		
4	16	57934	STUD, WATER PUMP BODY /	3		
5	16	57933	STUD, GEAR HOUSING TO D	2		
6	31	20231	BEARING, ROLLER - DRIVE S	1		
7		38071	PLATE, SUPPORT - EXHAUST	1		
8		37721	SEAL, EXHAUST TUBE	1		4
9	43	55607	GEAR, PINION - DRIVE SHAFT	1		
10	11	55910	NUT, PINION GEAR TO DRIVE	1		
11	27	32771	GASKET, WATER PUMP BASE	1		4
12	25	26855	"O" RING, WATER PUMP BASE	1		4
13	46	48745A 1	WATER PUMP BASE ASSEMBL	1		
14	26	26782	OIL SEAL, WATER PUMP BAS	1		
15	26	23300	OIL SEAL, WATER PUMP BAS	1		
16	17	35973	DOWEL PIN, WATER PUMP E	2		
17	27	32769	GASKET, LOWER - WATE PUM	1		4
18		32768	PLATE, FACE - WATER PUMP E	1	SERIAL 00000000-02979678	
18		54705	PLATE, FACE - WATER PUMP E	1	SERIAL 03043031-09999999	
19	27	32770	GASKET, UPPER - FACE PLATE	1		4
20	47	20268	IMPELLER, WATER PUMP	1		
21	28	56662	KEY, IMPELLER DRIVE	1		
22	46	48746A 1	WATER PUMP BODY ASSEMBL	1		
23		48753	INSERT, WATER PUMP BOD	1		
24	26	32121	OIL SEAL, WATER PUMP BOI	1		
25	12	29245	WASHER, WATER PUMP BOD	3		
26	11	35045	NUT, WATER PUMP BODY AN	3		
27	26	38452	SEAL, RUBBER - WATER INLE	1		4
28	12	38453	WASHER, NYLON - WATER PU	1		
29	25	20273	RING, RUBBER - CENTRIFUGA	1		4
30	25	29619	"O" RING, UPPER - DRIVE SHA	1		4
31	10	28634	SCREW, GREASE FILLER AND	2		
32	12	20260	WASHER, GREASE FILLER AN	2		
33	19	48750	PLUG, GEAR HOUSING FLUSH	1		
34	12	49221	WASHER, GEAR HOUSING FLL	1		
35		56622A 1	SHAFT ASSEMBLY, SHIFT - LO	1	SERIAL 00000000-02979678	
35		55420A 1	SHAFT ASSEMBLY, SHIFT - LO	1	SERIAL 03043031-09999999	