



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1626	4005A 4	GEAR HOUSING ASSEMBLY, CO	1	-SEE NOTE BELOW SERIAL 000	
-	1626	4005A 5	GEAR HOUSING ASSEMBLY, CO	1	-SEE NOTE BELOW SERIAL 000	
-	1626	3927A 4	GEAR HOUSING ASSEMBLY, CO	1	-SEE NOTE BELOW SERIAL 030	
-	1626	3927A 5	GEAR HOUSING ASSEMBLY, CO	1	-SEE NOTE BELOW SERIAL 030	
1	1626	4005A 6	GEAR HOUSING ASSEMBLY	1	SEE PAGE 27 FOR BREAKDOWN	
1	1626	3927A 6	GEAR HOUSING ASSEMBLY	1	SEE PAGE 27 FOR BREAKDOWN	
49		36288	CAM, SHIFT	1		
50		38441	FOLLOWER, CAM	1		
51		20843	SLIDE, CROSS PIN	1		
52	24	39845	SPRING, COMPRESSION - CAM	1		
53	15	38374A 1	SHIM, BEARING CUP TO GEAR	AR		
54	31	38356A 1	TAPERED ROLLER BEARING A	1		
55	31	21739	BEARING, ROLLER - FORWARD	1		
56	43	55608	FORWARD GEAR ASSEMBLY	1		
57	52	47586	RATCHET, SLIDING CLUTCH	1		
58	17	38113	PIN, CROSS - RATCHET TO PR	1		
59	24	38114	SPRING, RETAINING - CROSS	1		
60	44	55911	SHAFT, PROPELLER	1		
61	43	55609	REVERSE GEAR ASSEMBLY	1		
62	15	20927A 1	SHIM, THRUST WASHER TO G	AR		
63	12	32004	WASHER, THRUST - REVERSE	1		
64	30	20839	BEARING, BALL - REVERSE GE	1		
65	25	31986	"O" RING, BEARING CARRIER	1		4
66		55904A 1	BEARING CARRIER ASSEMBLY	1		
67	31	21700	BEARING, ROLLER - BEARIN	1		
68	26	56788	OIL SEAL, BEARING CARRIER	1		
69	28	30281	KEY, LOCATING - BEARING CA	1		
70	14	53012	TAB WASHER, GEAR HOUSING	1		
71		53013	COVER, GEAR HOUSING	1		
72		31640A 1	TRIM TAB ASSEMBLY, GEAR H	1		
73	10	55726	SCREW, TRIM TAB TO GEAR H	1		
74		55908A 1	THRUST HUB AND WASHER AS:	1		
75	12	31992	WASHER, CUPPED - THRUST	1		
76	12	55907	WASHER, SPLINED - PROPELLE	1		
77	11	31990	NUT, PROPELLER	1		
78	12	45176	WASHER, DRIVE SHAFT HOUSIN	1		
79	11	34933	NUT, DRIVE SHAFT HOUSING TC	1		
80	12	45175	WASHER, DRIVE SHAFT HOUSIN	1		
81	11	34863	NUT, DRIVE SHAFT HOUSING TC	1		