



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2138	3879A 2	TOP COWL ASSEMBLY	1		
2		57821	INSERT, ROPE GUIDE - TOP COWL	1		
3	16	21391	STUD, TOP COWL TO SUPPORT	1		
4	16	21553	STUD, TOP COWL TO SUPPORT	2		
5	11	35814	NUT, TOP COWL STUD	3		
6		39609	SHIELD, REAR - TOP COWL	1		
7	10	20646	SCREW, REAR SHIELD TO TOP COWL	3		
8	12	26014	WASHER, REAR SHIELD SCREW	3		
9		39619	BUTTON, FRONT COVER RELEASE	1		
10	24	37911	SPRING, COMPRESSION - FRONT COVER	1		
11		39493	CATCH, FRONT COVER - TOP COWL	1		
12	10	23015	SCREW, FRONT COVER CATCH	2		
13	13	26396	LOCKWASHER, FRONT COVER CATCH	2		
14	14	20165	TAB WASHER, SHEAVE SHAFT	1		
15	11	20166	NUT, SHEAVE SHAFT (LEFT HAND)	1		
16	25	39597	GROMMET, STARTER HOUSING	2		
17		57215	LEVER, INTERLOCK - STARTER HOUSING	1		
18		56602	CAM, INTERLOCK	1		
19	10	20037	SCREW, INTERLOCK CAM TO LEVER	2		
20	10	57273	SCREW, INTERLOCK LEVER TO HOUSING	1		
21	12	57781	WASHER, INTERLOCK LEVER SCREW	1		
22	24	57272	SPRING, INTERLOCK LEVER	1		
23		55860	PULLEY, STARTER CABLE	1		
24	10	45210	SCREW, PULLEY TO STARTER HOUSING	1		
25	12	22887	WASHER, PULLEY SCREW	2		
26	23	30977	SPACER, PULLEY SCREW	1		
27	11	24656	NUT, PULLEY SCREW	1		
28	2140	3883	HOUSING, STARTER	1		
29	10	37562	SCREW, STARTER HOUSING TO HOUSING	2		
30	13	26393	LOCKWASHER, STARTER HOUSING TO HOUSING	2		
31		55192	BRACKET, LIMIT STOP - REAR	1		
32	10	20639	SCREW, LIMIT STOP BRACKET TO HOUSING	1		
33	11	46793	NUT, LIMIT STOP BRACKET SCREW	1		
34	10	26065	SCREW, STARTER HOUSING TO HOUSING	1		
35	11	20102	NUT, STARTER HOUSING SCREW	1		
36	25	39597	GROMMET, LIMIT STOP BRACKET TO HOUSING	1		
37	10	37562	SCREW, LIMIT STOP BRACKET TO HOUSING	1		
38	13	26393	LOCKWASHER, LIMIT STOP BRACKET TO HOUSING	1		
39		39835	RETAINER, STARTER REWIND	1		
40	24	39502A 1	SPRING, STARTER REWIND	1		
41	22	28912	PUSHING SPRING GUIDE	1		